

Controller IP settings

Download and unzip: [CyBroBinLoader](#)

From unzipped folder run "CyBroBinLoader.exe"

Connect controller and PC (laptop) to:

1. **LAN** (Router with DHCP server) **OR**
2. **Direct** (just cable between PC and controller)

1	Select network adapter
2	Select "Direct connection" if controller is directly connected to PC
3	Select controller NAD
4	Configure IP settings
5	Send settings to controller

