



# BM-HMI UI

## Main screen

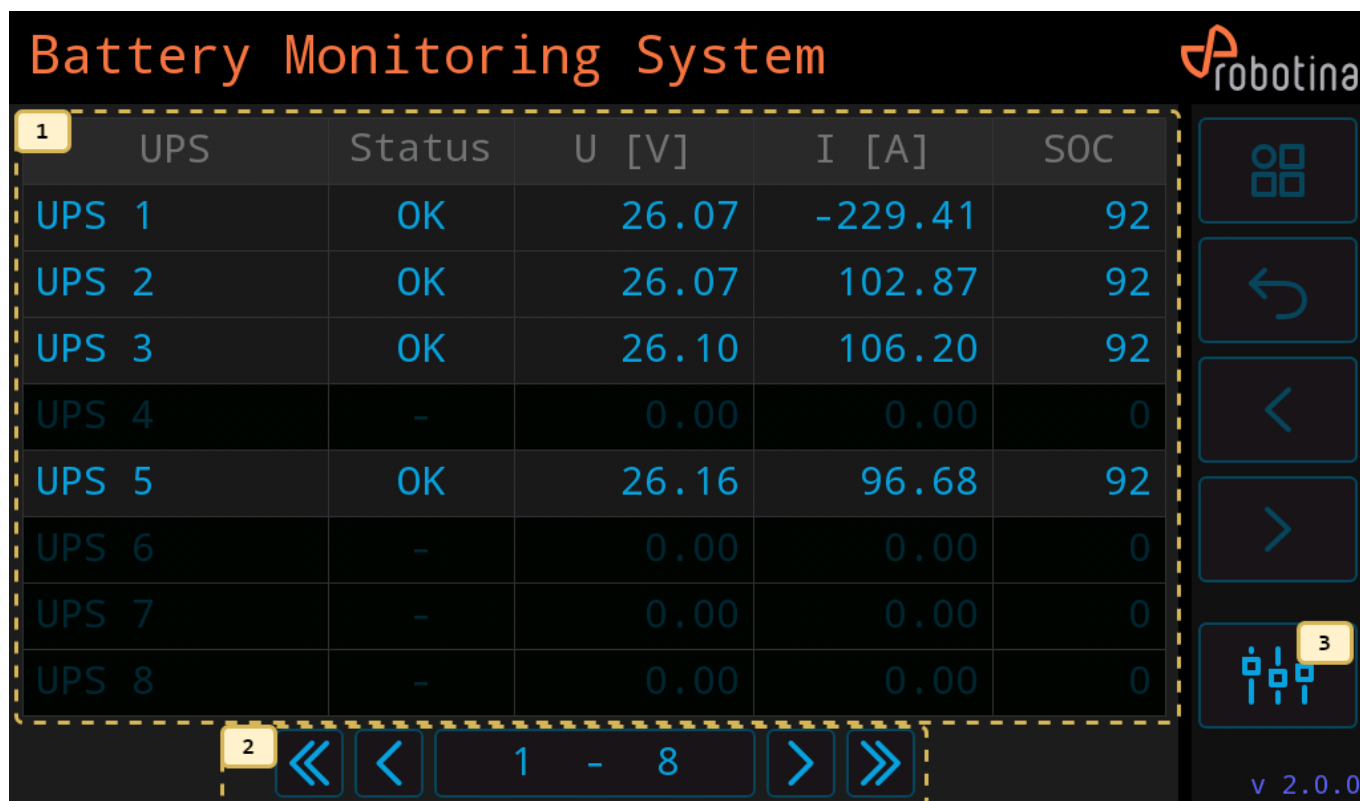


1	UPS data
	- tap to display UPS details
2	UPS navigation buttons
	- first ups
	- previous 8 UPS
	- next 8 UPS
	- last 8 UPS
3	Settings screen

## UPS screen

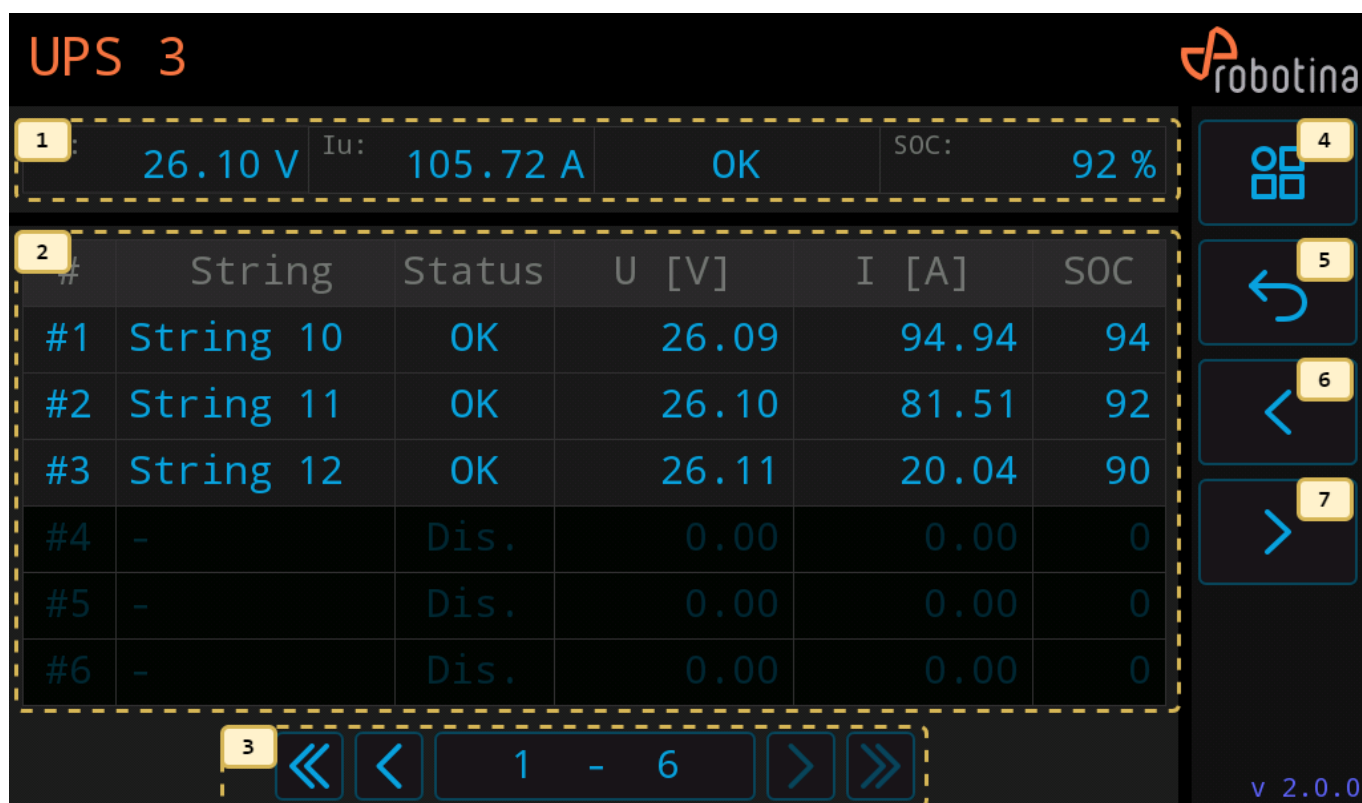


1	UPS data
2	String data
	- tap to display String details
3	String navigation
4	Main screen
5	Previous screen
6	Previous UPS
7	Next UPS

## String screen

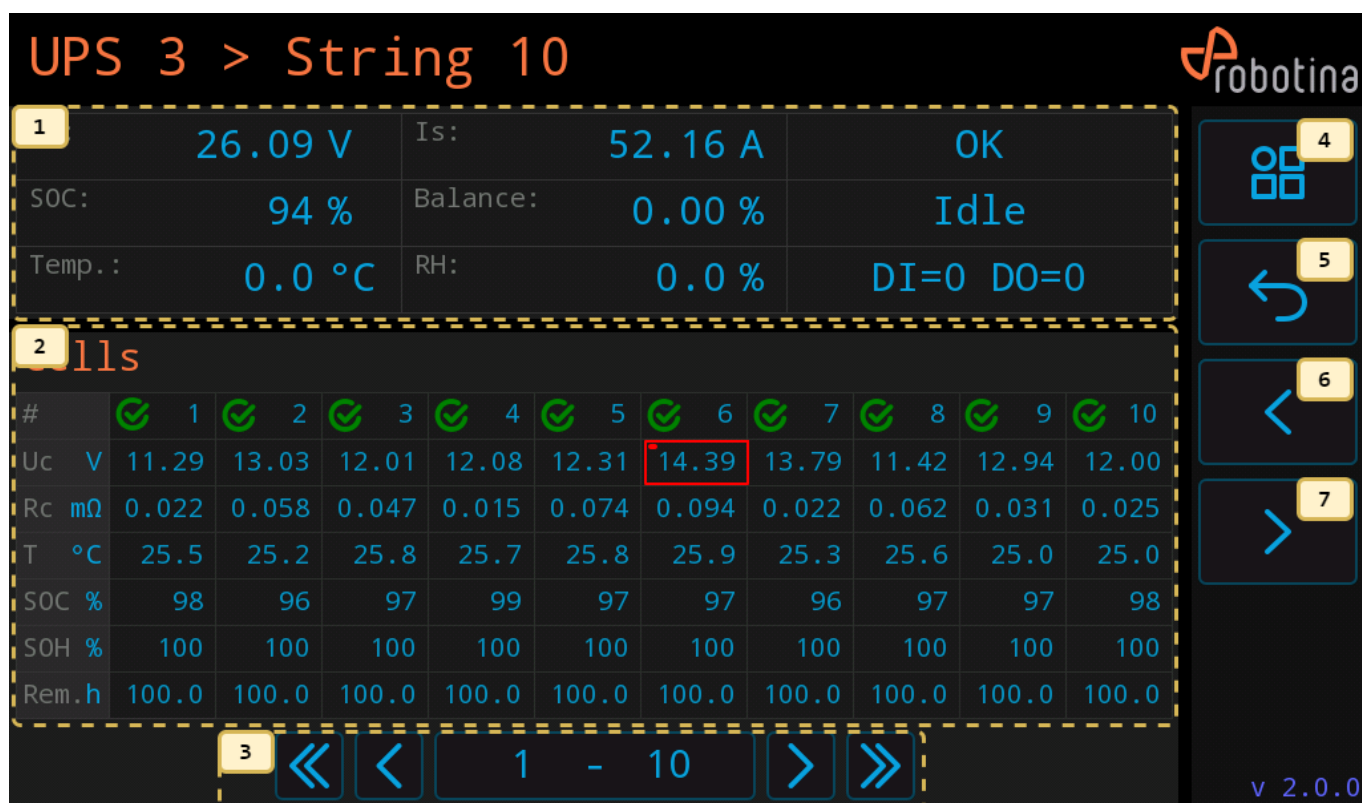


1	String detailed data
2	Cells data
3	Cell navigation
4	Main screen
5	Previous screen
6	Previous String
7	Next String

## UPS names screen

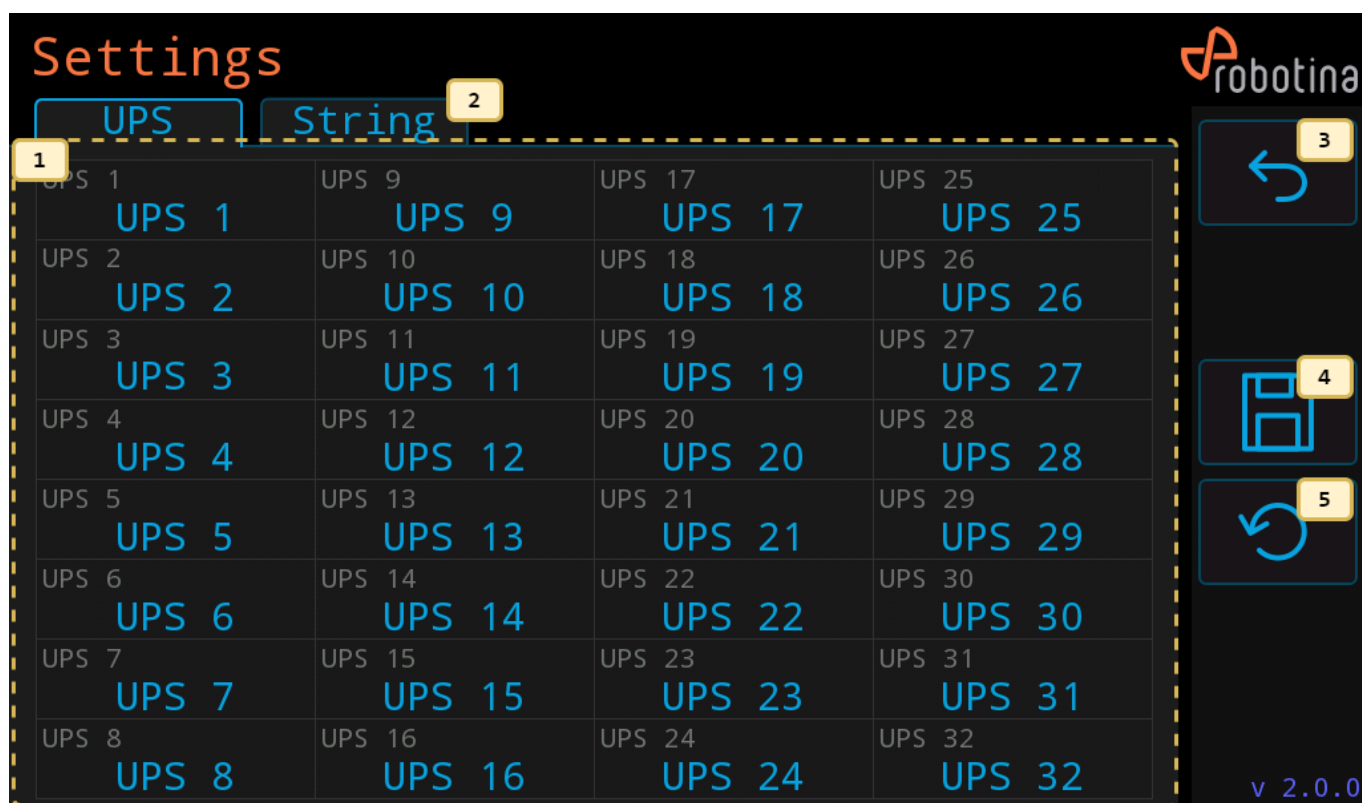

1	UPS names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names

## String names screen

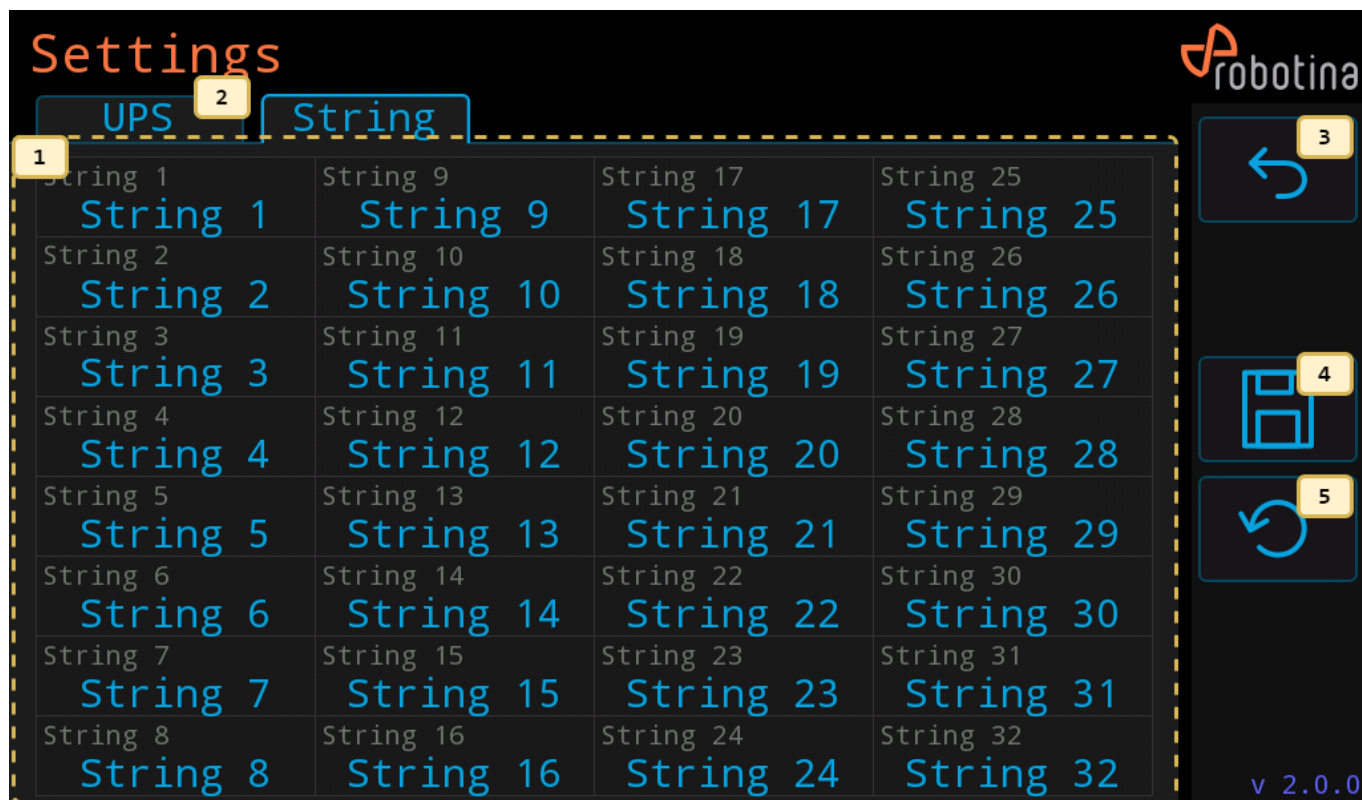

1	String names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names

Content in preparation. Please check back soon.