


Manual Time Settings

If the BM-GW does not have access to the NTC Server (Internet), it is necessary to disable date and time synchronization via the NTP server and set the date and time manually.

1. Disable NTP

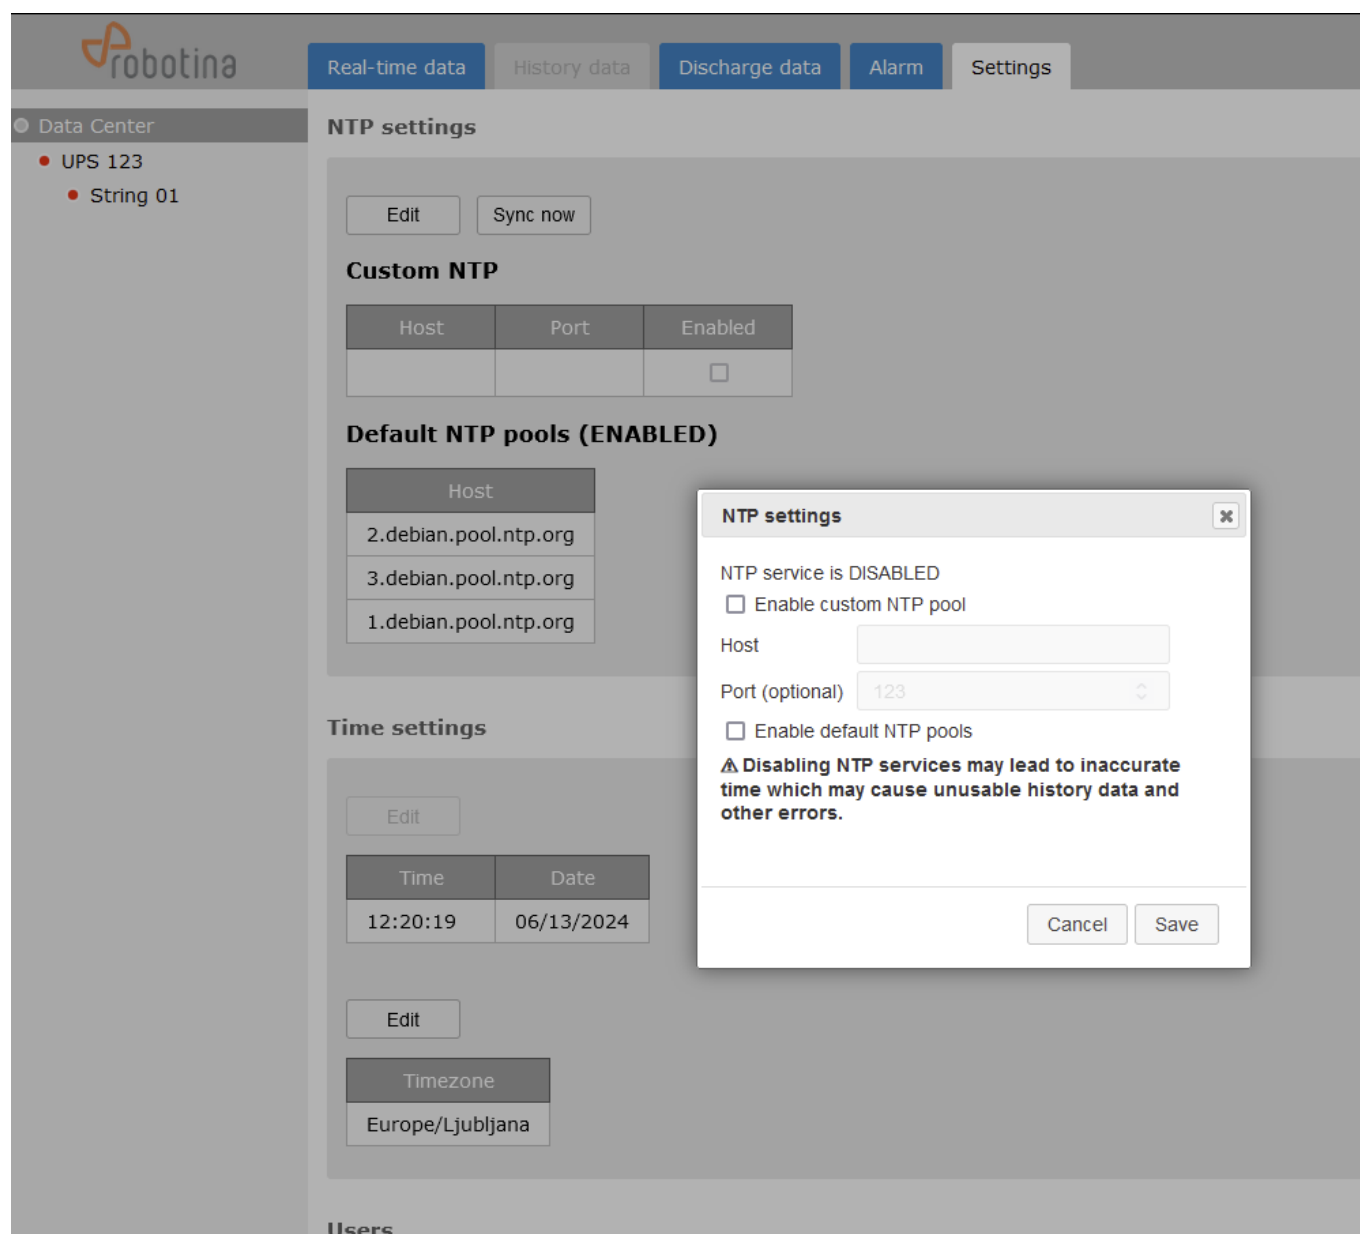

The screenshot shows the Robotina web interface with the 'Settings' tab selected. The 'NTP settings' section is active, displaying 'Custom NTP' and 'Default NTP pools (ENABLED)'. A modal dialog titled 'NTP settings' is open, indicating that the NTP service is disabled. The dialog includes options to enable custom NTP pools and default NTP pools, with fields for host and port. A warning message states: 'Disabling NTP services may lead to inaccurate time which may cause unusable history data and other errors.' The 'Time settings' section is also visible, showing the current time and date, and the 'Timezone' set to 'Europe/Ljubljana'.

NTP settings

Custom NTP

Host	Port	Enabled
		☐

Default NTP pools (ENABLED)

Host
2.debian.pool.ntp.org
3.debian.pool.ntp.org
1.debian.pool.ntp.org

Time settings

Time	Date
12:20:19	06/13/2024

Timezone: Europe/Ljubljana

NTP settings modal:

NTP service is DISABLED

☐ Enable custom NTP pool

Host:

Port (optional):

☐ Enable default NTP pools

⚠ Disabling NTP services may lead to inaccurate time which may cause unusable history data and other errors.

Cancel Save