

## **Manual Time Settings**

If the BM-GW does not have access to the NTC Server (Internet), it is necessary to disable date and time synchronization via the NTP server and set the date and time manually.

## 1. Disable NTP

Select the root in the tree structure on the left (Data Center) and then go to the Settings page.

Scroll down to NTP settings section and press Edit button.

Disable both "Enable custom NTP pool" and "Enable default NTP pools".

The Edit button in the Time settings section should become enabled.

Probotina	Real-time data History data D	Discharge data Alarm Settings
Data Center	NTP settings	
• UPS 123		
• String 01	Edit Sync now	
	Custom NTP	
	Host Port B	Enabled
	Default NTP pools (ENABLED)	
	Host	NTR softings
	2.debian.pool.ntp.org	N IF settings
	3.debian.pool.ntp.org	NTP service is DISABLED
	1.debian.pool.ntp.org	Enable custom NTP pool
		Host
		Port (optional) 123
	Time settings	Enable default NTP pools
		▲ Disabling NTP services may lead to inaccurate
	Edit	other errors.
	Time Date	
	12:20:19 06/13/2024	Cancel Save
	Edit	
	Timezone	
	Europe/Ljubljana	
	Users	

## 2. Set date and time

In "Time settings" section press Edit button.

Set the date and time, then press the Set button.

