

BM-GW WEB UI

- Demo: BTMS BM-GW WEB UI demo
- User: demo
- Pass: demo

Log-in

×

1st time log in:

- Connect Ethernet 2 port to facility LAN
- Connect PC to Ethernet 1 port (standard Ethernet cable between PC and BM-GW Ethernet 1 port)
- For PC Ethernet connection set fixed IP 192.168.10.200.
- Use the Internet browser to go to https://192.168.10.1
- Log in as:
 - $\circ\,$ user: admin
 - password: bmgw!admin
- Check the WAN IP address on the Data center Settings page and set it if necessary

×

• Connect the PC to the facility LAN and go to the https://IP address of the WAN port

General description

×

1	Pages tabs
2	Data center tree structure
3	Page data

Data center

Real-time data

×

1	Tabular display of data for the Data Center
2	Select a parameter for the graphic display
3	Graphic bar-graph data display for the data center

Discharge data

×

1	Discharge events table
2	String time-plot for discharge event
3	Cell time-plot for discharge event

String time-plot for discharge event

×

Cell time-plot for discharge event

×	
1	Cell selection

Alarm

×

1	Alarms sub-page selection
2	Alarms table

E-mails

×

SMS

×

Settings

Network settings, NTP settings

×

Time settings, Users

×

SNMP settings, SMS notifications, Project settings, Data export

×

UPS

Real-time data

×

History data

×

Discharge data

×

String time-plot

×

Cell time-plot

×

Alarm

×

String

Real-time data

String

×

start

Cells

×

History data

String

×

Cells

×

Discharge data

×

String time-plot

×

Cell time-plot

×

Alarm

×

Settings

×

Enable for which alarm SMS / e-mail will be sent.