


BM-HMI UI

Main screen

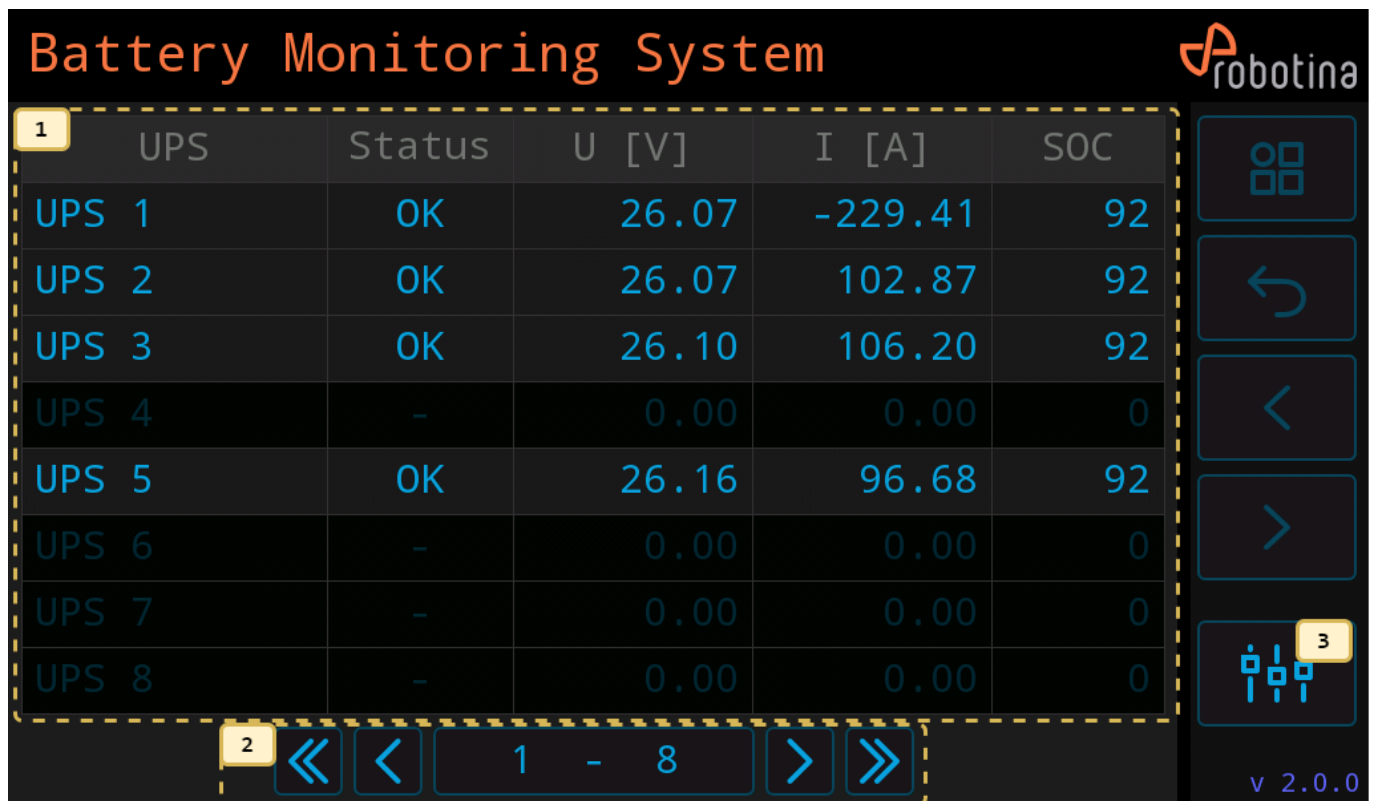

1	UPS data
	- tap to display UPS details
2	UPS navigation buttons
	- first ups
	- previous 8 UPS
	- next 8 UPS
3	- last 8 UPS
	Settings screen

UPS screen

UPS 3 robotina

1: 26.10 V ^{Iu:} 105.72 A OK SOC: 92 %

#	String	Status	U [V]	I [A]	SOC
#1	String 10	OK	26.09	94.94	94
#2	String 11	OK	26.10	81.51	92
#3	String 12	OK	26.11	20.04	90
#4	-	Dis.	0.00	0.00	0
#5	-	Dis.	0.00	0.00	0
#6	-	Dis.	0.00	0.00	0

3: << < 1 - 6 > >>

4: [Main Screen Icon]

5: [Previous Screen Arrow]

6: [Previous UPS Arrow]

7: [Next UPS Arrow]

v 2.0.0

1	UPS data
2	String data - tap to display String details
3	String navigation
4	Main screen
5	Previous screen
6	Previous UPS
7	Next UPS

String screen





UPS 3 > String 10 robotina

1	26.09 V	Is:	52.16 A	OK
	SOC: 94 %	Balance:	0.00 %	Idle
	Temp.: 0.0 °C	RH:	0.0 %	DI=0 DO=0

2 **lls**

#	✓ 1	✓ 2	✓ 3	✓ 4	✓ 5	✓ 6	✓ 7	✓ 8	✓ 9	✓ 10
Uc V	11.29	13.03	12.01	12.08	12.31	14.39	13.79	11.42	12.94	12.00
Rc mΩ	0.022	0.058	0.047	0.015	0.074	0.094	0.022	0.062	0.031	0.025
T °C	25.5	25.2	25.8	25.7	25.8	25.9	25.3	25.6	25.0	25.0
SOC %	98	96	97	99	97	97	96	97	97	98
SOH %	100	100	100	100	100	100	100	100	100	100
Rem. h	100.0	100.0	100.0	100.0	100.0	100.0	100.0	100.0	100.0	100.0


3 << < 1 - 10 > >>

4  5  6  7 

v 2.0.0


1	String detailed data
2	Cells data
3	Cell navigation
4	Main screen
5	Previous screen
6	Previous String
7	Next String

UPS names screen

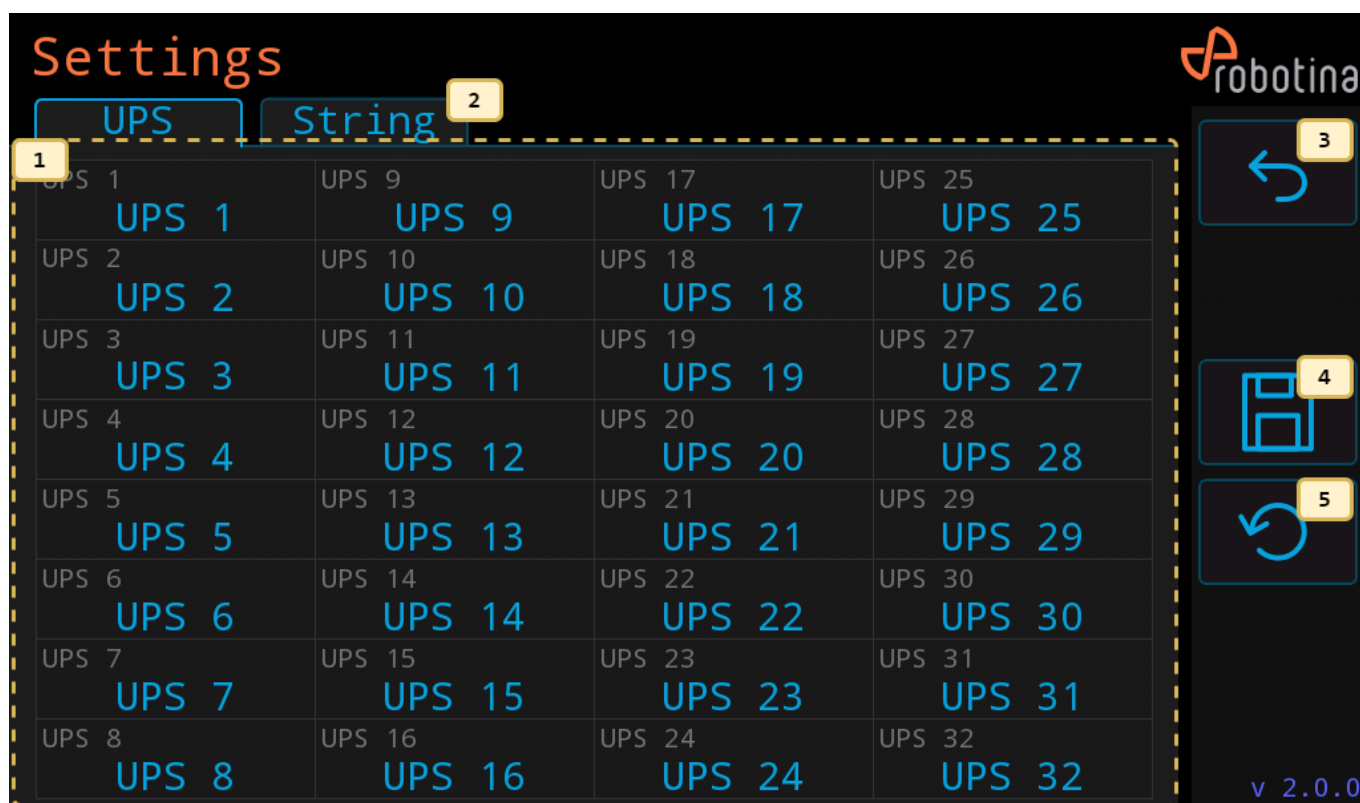

1	UPS names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names

String names screen

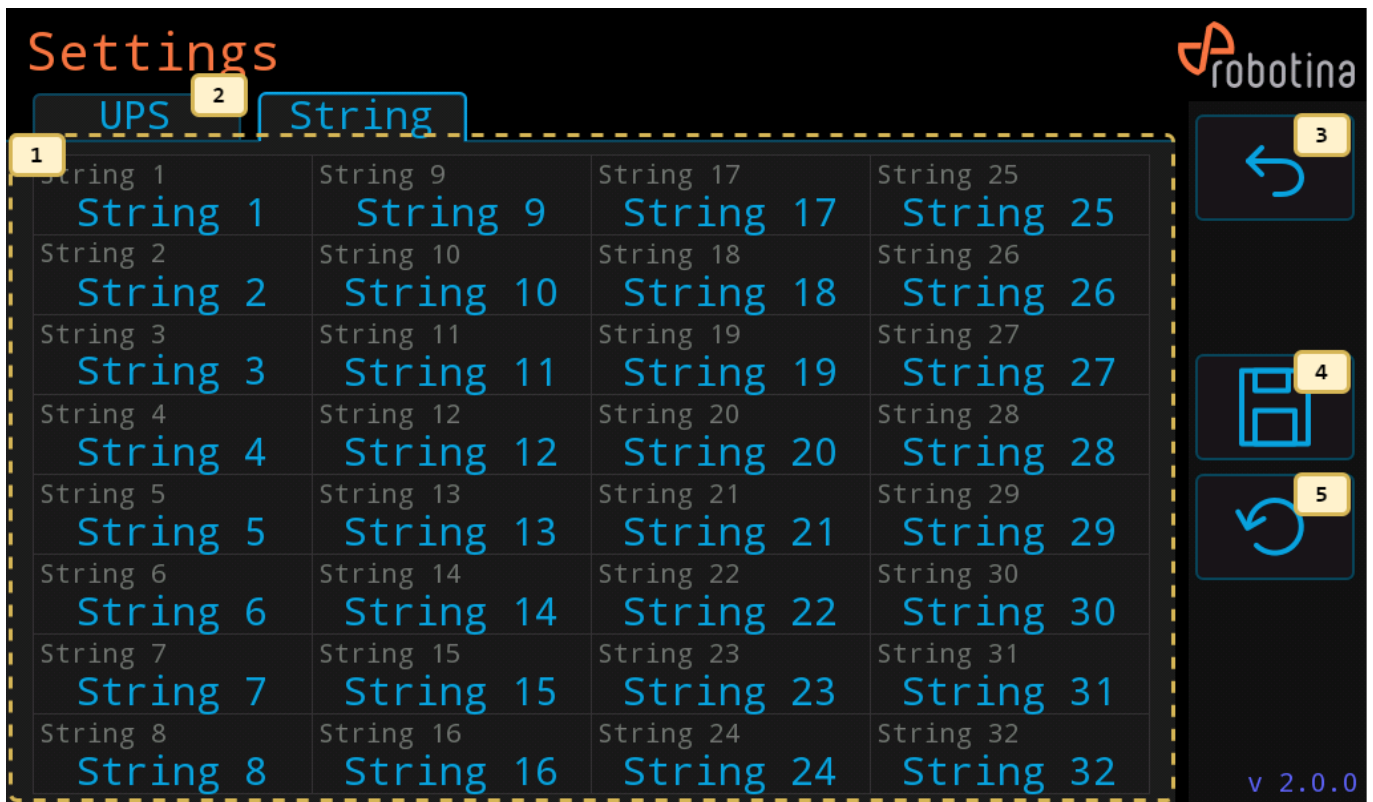

1	String names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names