

1. BM-HMI UI

1.1. Main screen



1	UPS data
	- tap to display UPS details
2	UPS navigation buttons
	- first ups
	- previous 8 UPS
	- next 8 UPS
	- last 8 UPS
3	Settings screen

1.2. UPS screen



1	UPS data
2	String data
	- tap to display String details
3	String navigation
4	Main screen
5	Previous screen
6	Previous UPS
7	Next UPS

1.3. String screen



1	String detailed data
2	Cells data
3	Cell navigation
4	Main screen
5	Previous screen
6	Previous String
7	Next String

1.4. UPS names screen



1	UPS names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names

1.5. String names screen



1	String names
	- tap to edit name
2	go to String names screen
3	Previous page
4	Save names to Flash memory
5	Restore default names