


Room Panel

The room panel is the main interface for guest interaction inside the room, enabling control of comfort functions and room status.

Idle screen

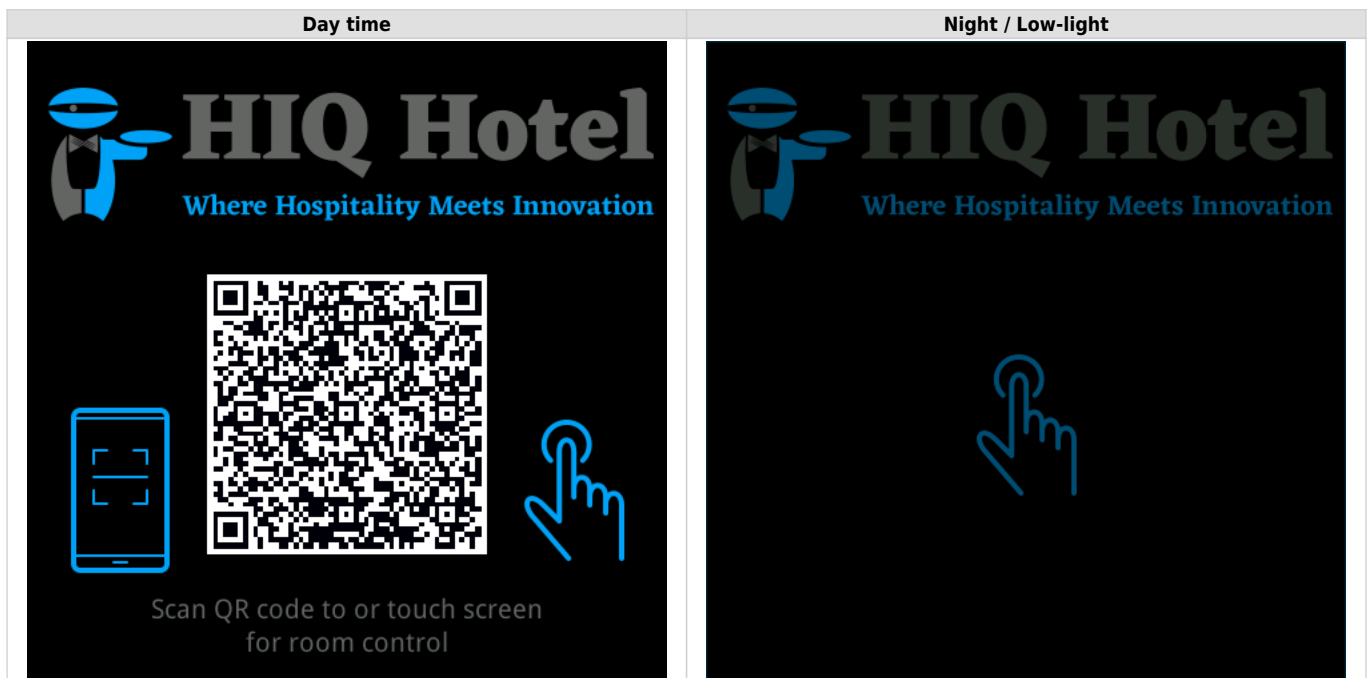


Main screen



Door-bell screen

Door-bell screen is activated when door-bell button on corridor panel is pressed.

When the door-bell is activated, the beeper beeps briefly.

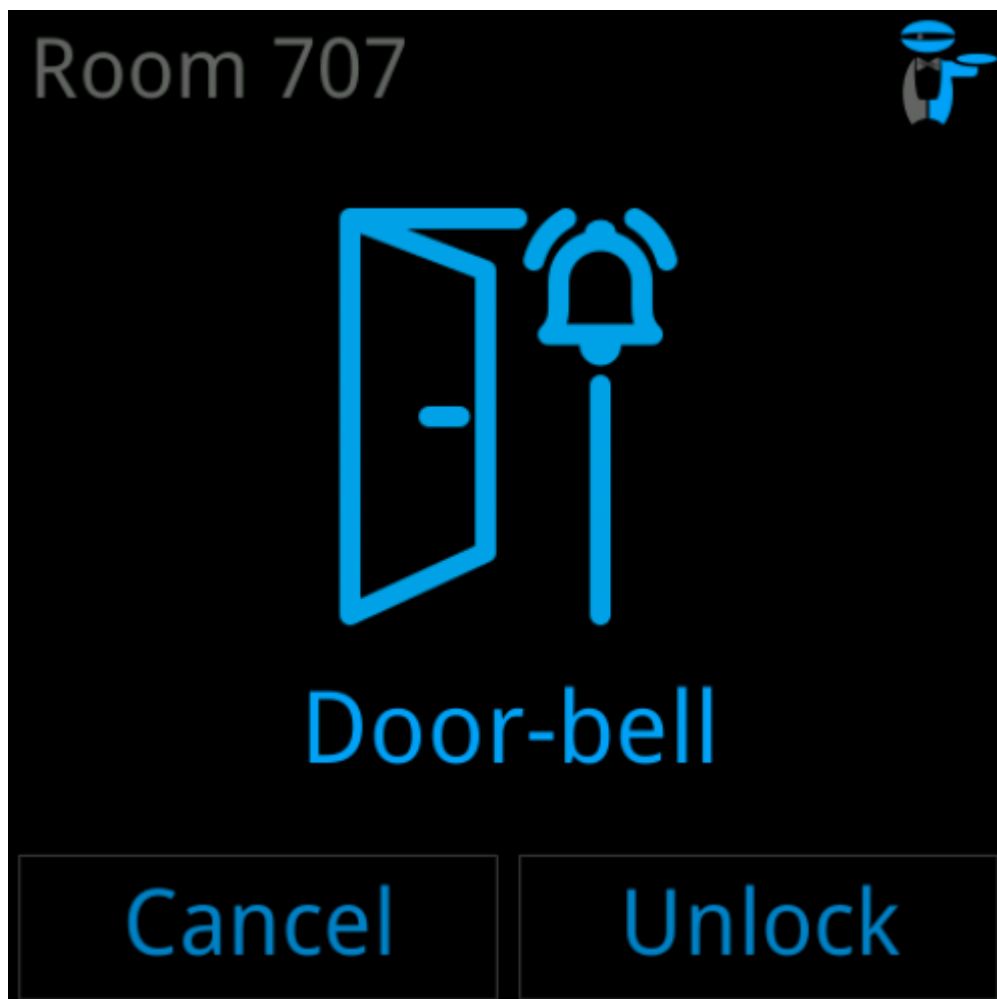


1	Close door-bell screen
2	Unlock door

SOS screen

SOS screen is activated when an SOS pull-switch is activated.

During SOS panel periodically beeps.

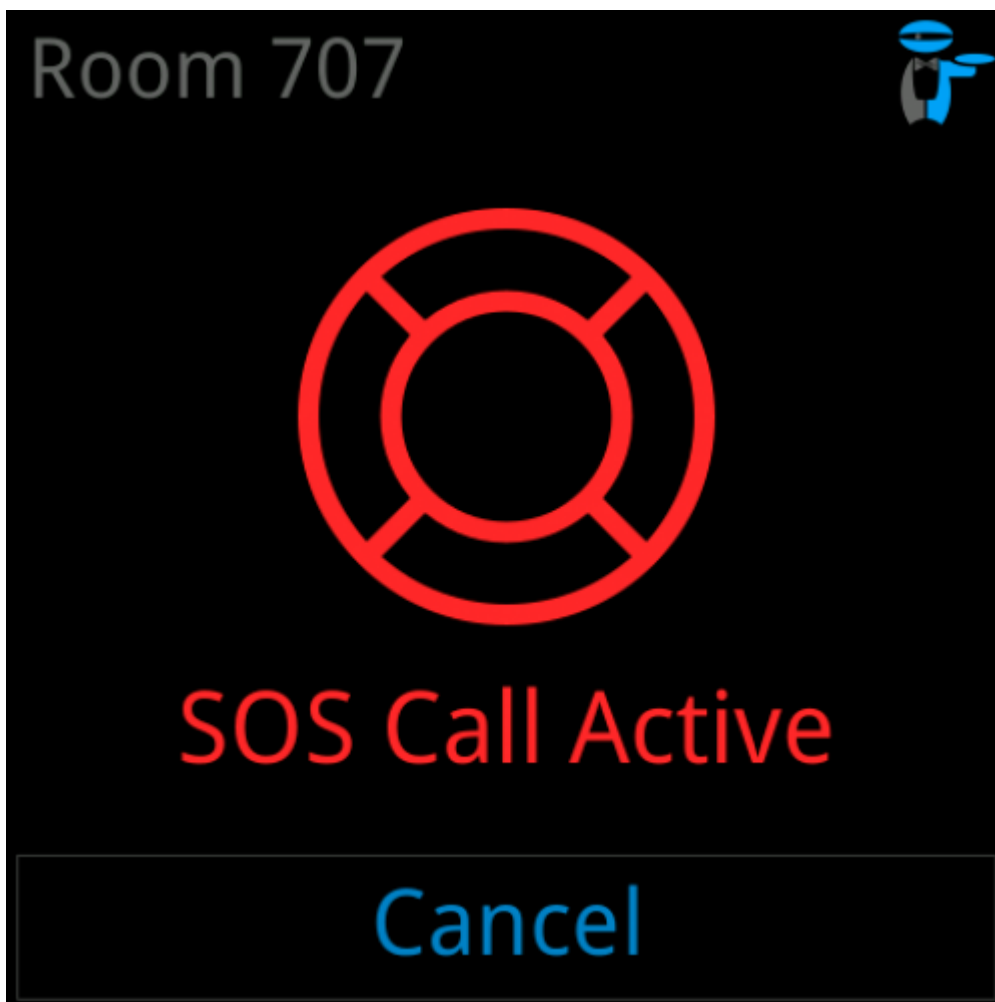**1**

Dismiss off SOS alarm

Fire-alert screen

Fire alert screen is activated when temperature rise is abnormal. It can be activated also externally (from fire control center, reception, ...).

During Fire alert panel periodically beeps.

Fire alert cannot be dismissed from in-room panel.

Room 707



Fire alert

Please remain calm and
evacuate immediately
using designated exits