

 
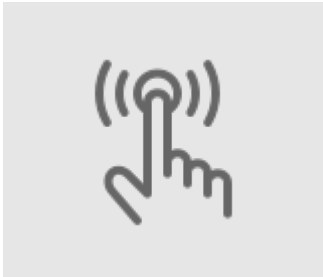




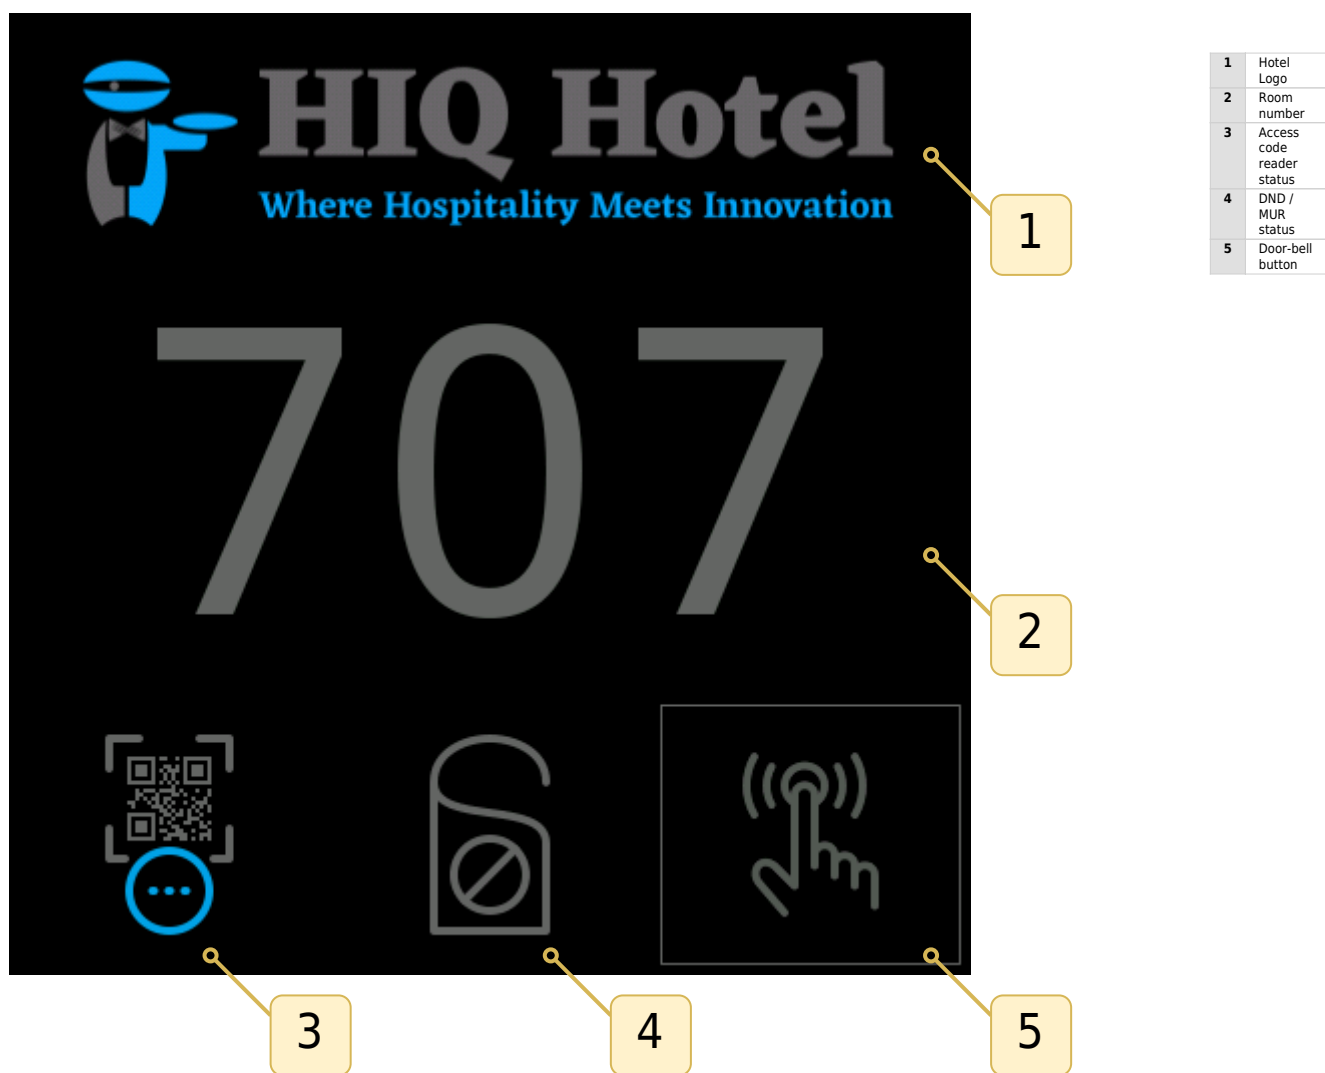


TGP touch panel

Corridor

The panel in the corridor displays the hotel logo, room number and, in the bottom line, the status of the access code reader, the DND or MUR icon and the door-bell button.




Access code reader type	DND / MUR status	Door-bell button
 QR code & RFID card reader	 No DND or MUR	 Door-bell enabled

Access code reader type	DND / MUR status	Door-bell button
 <p data-bbox="300 450 529 483">RFID card reader</p>	 <p data-bbox="828 450 984 483">DND active</p>	 <p data-bbox="1165 450 1407 483">Door-bell disabled</p>
 <p data-bbox="201 772 628 806">Keypad (touch to show keypad)</p>	 <p data-bbox="828 772 984 806">MUR active</p>	


In room

Idle screen

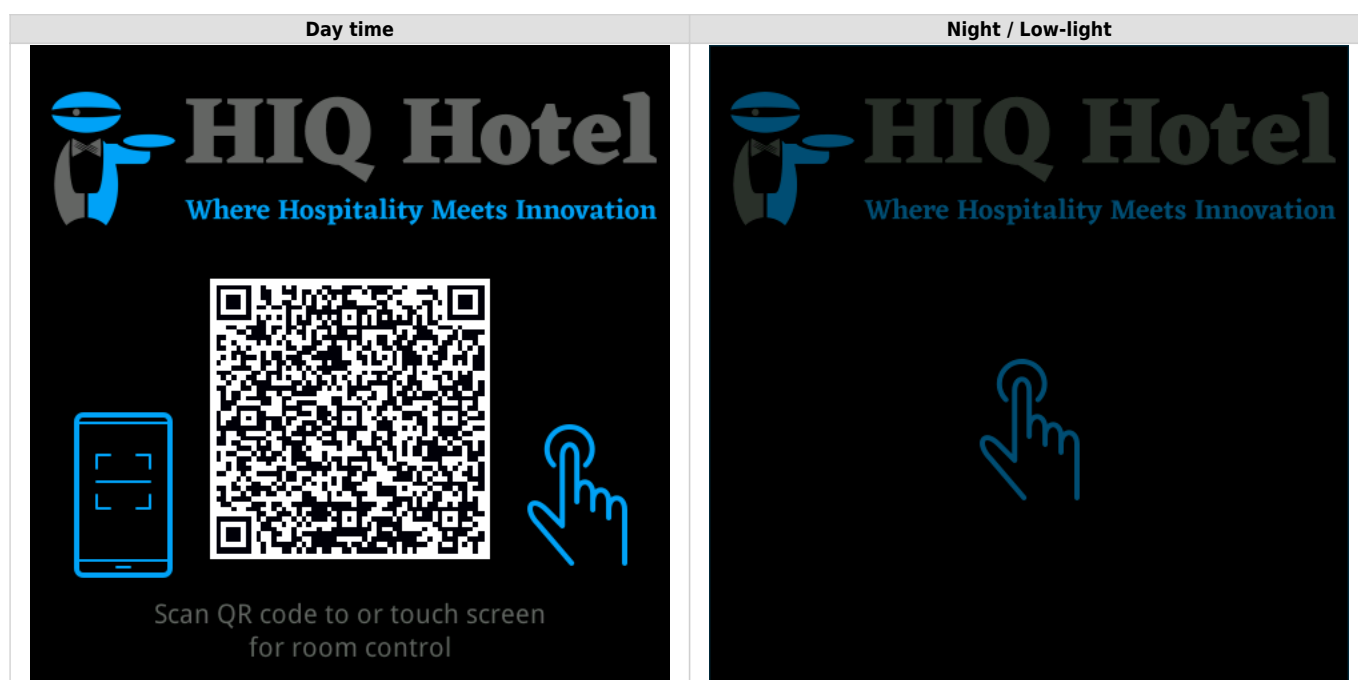

Main screen


- 1 Previous screen
- 2 Idle screen
- 3 Next screen
- 4 Toggle DND (Do Not Disturb)

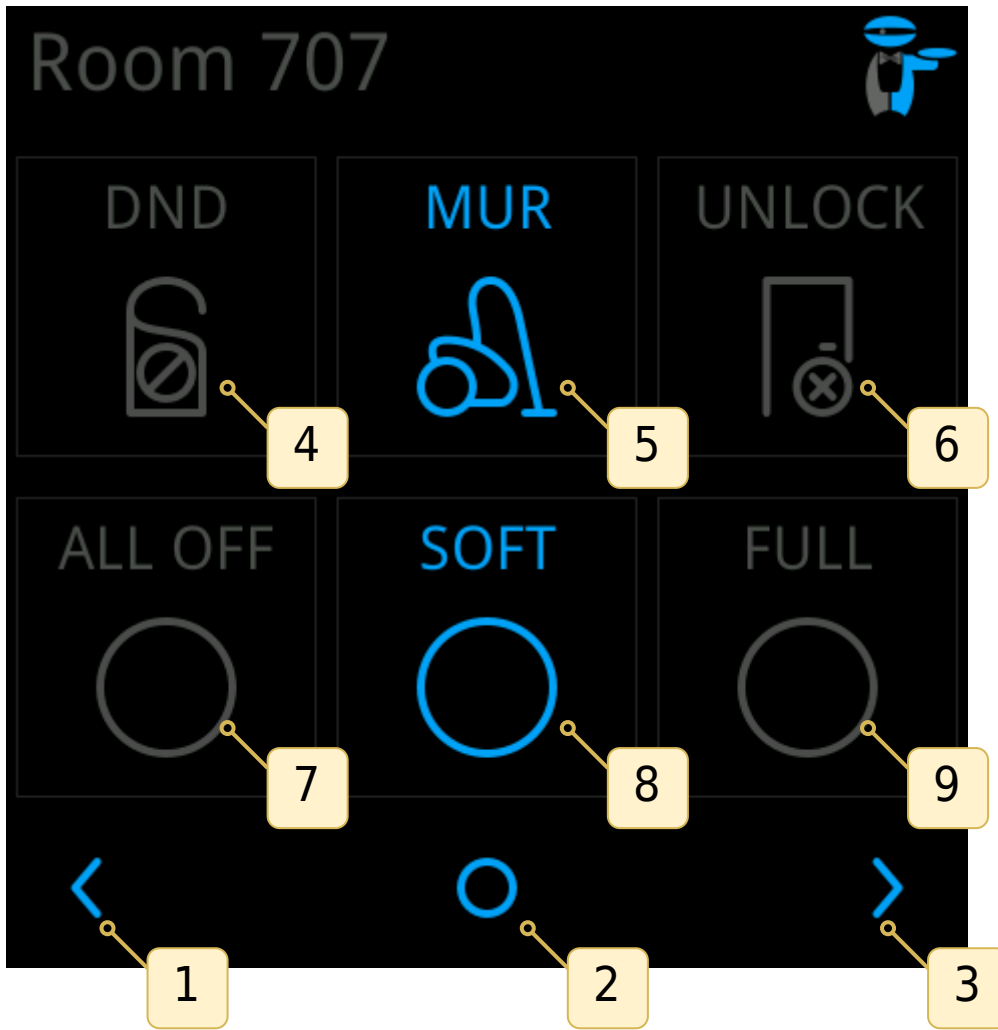


5	Toggle MUR (Make Up Room)
6	Unlock door
7	Scene "All off"
8	Scene "Soft"
9	Scene "Full"

HVAC screen

1	HVAC Set-point temperature increment / decrement
2	HVAC Fan limit increment / decrement
3	Toggle Bath ventilation

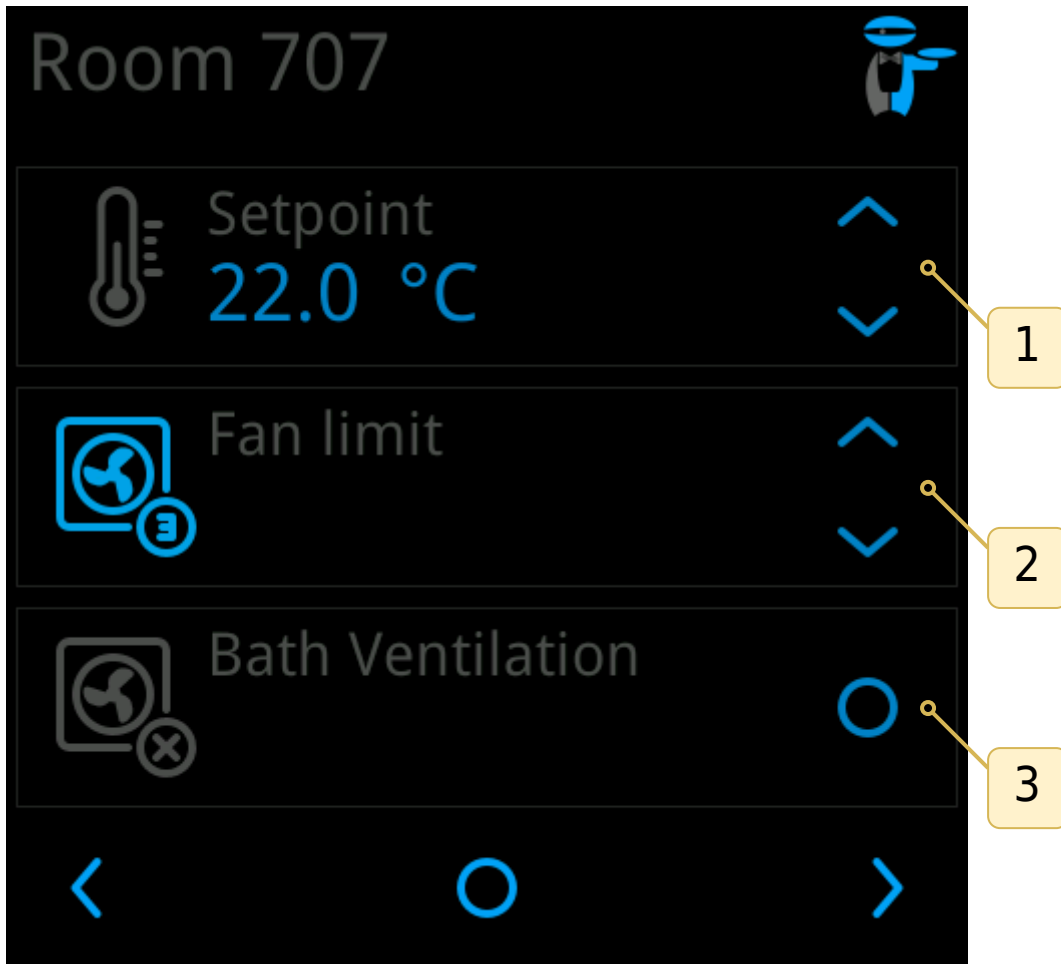


Lights screen

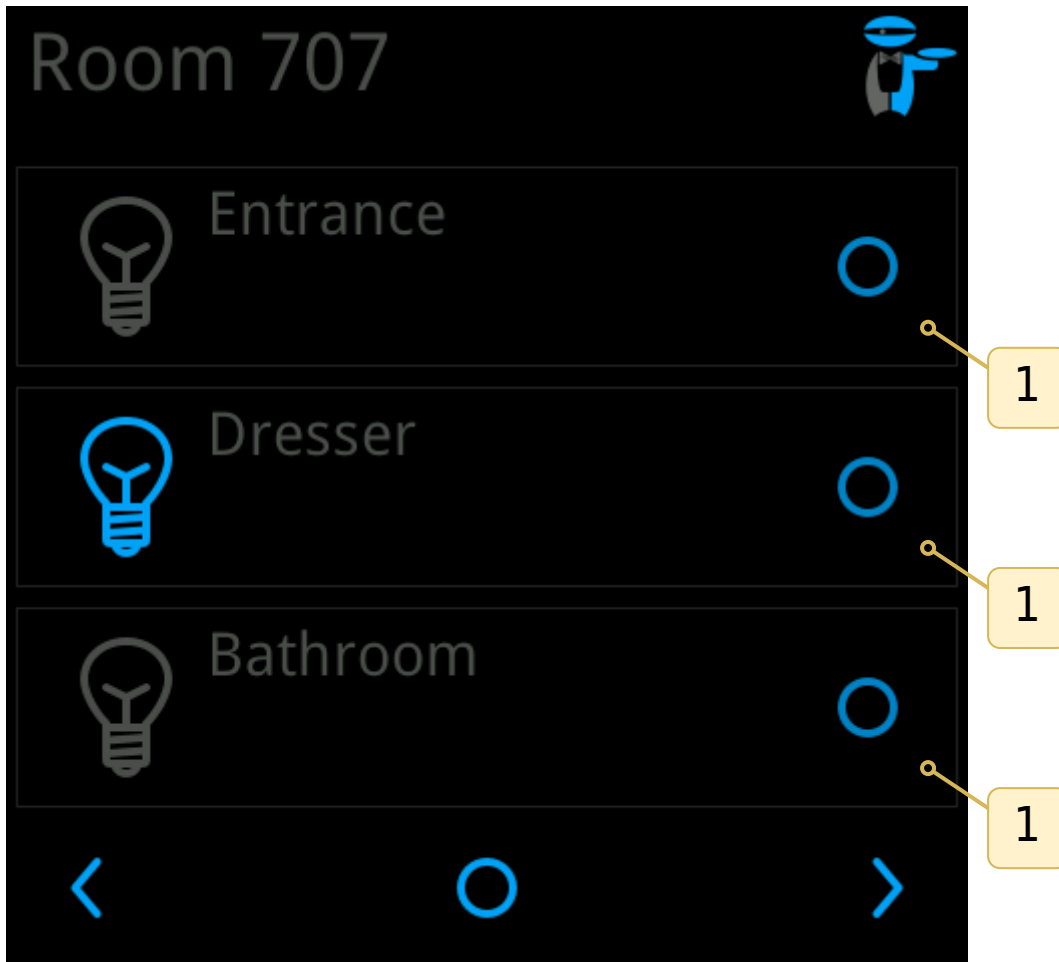

1

Toggle light ON / OFF


Dimmers & Blinds screen

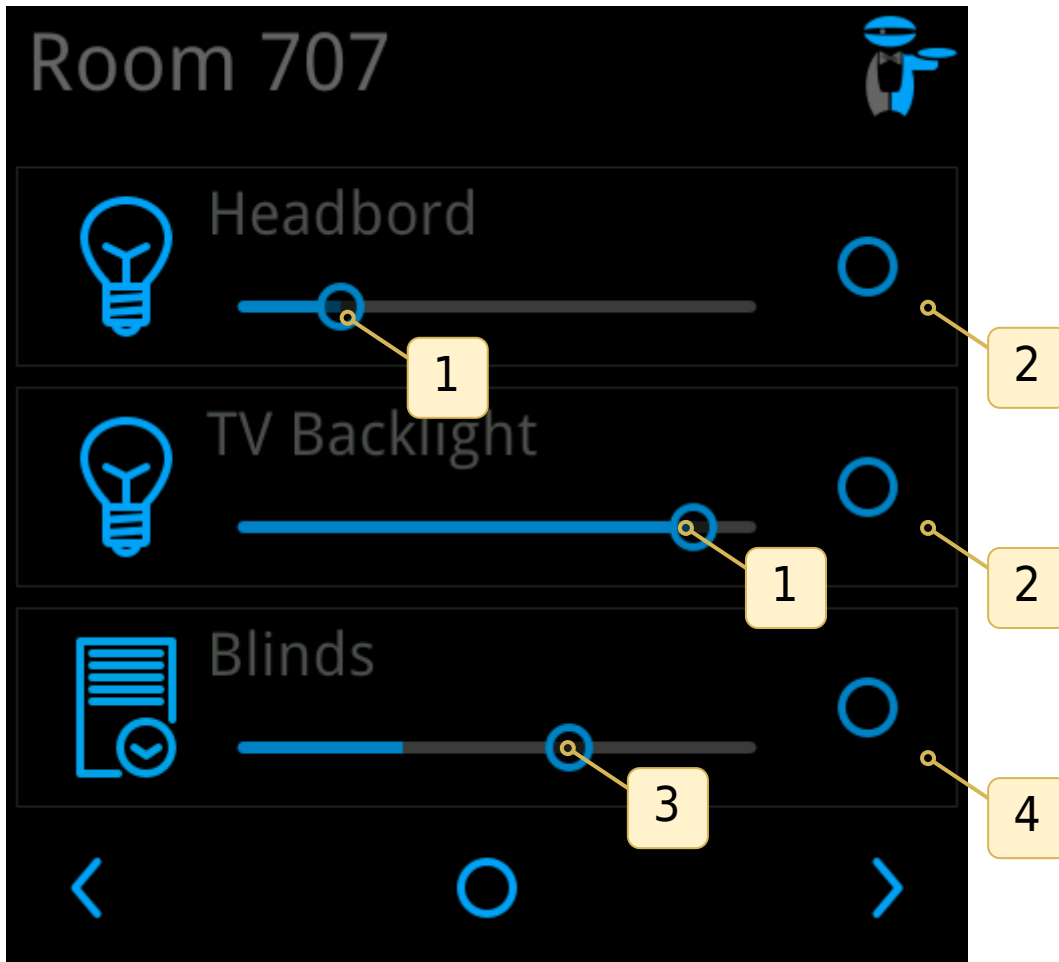

1	Slide to set lightness
2	Toggle light ON / OFF
3	Slide to set blinds setpoint (left = closed)
4	Stop blinds


Wake-up screens

Setup

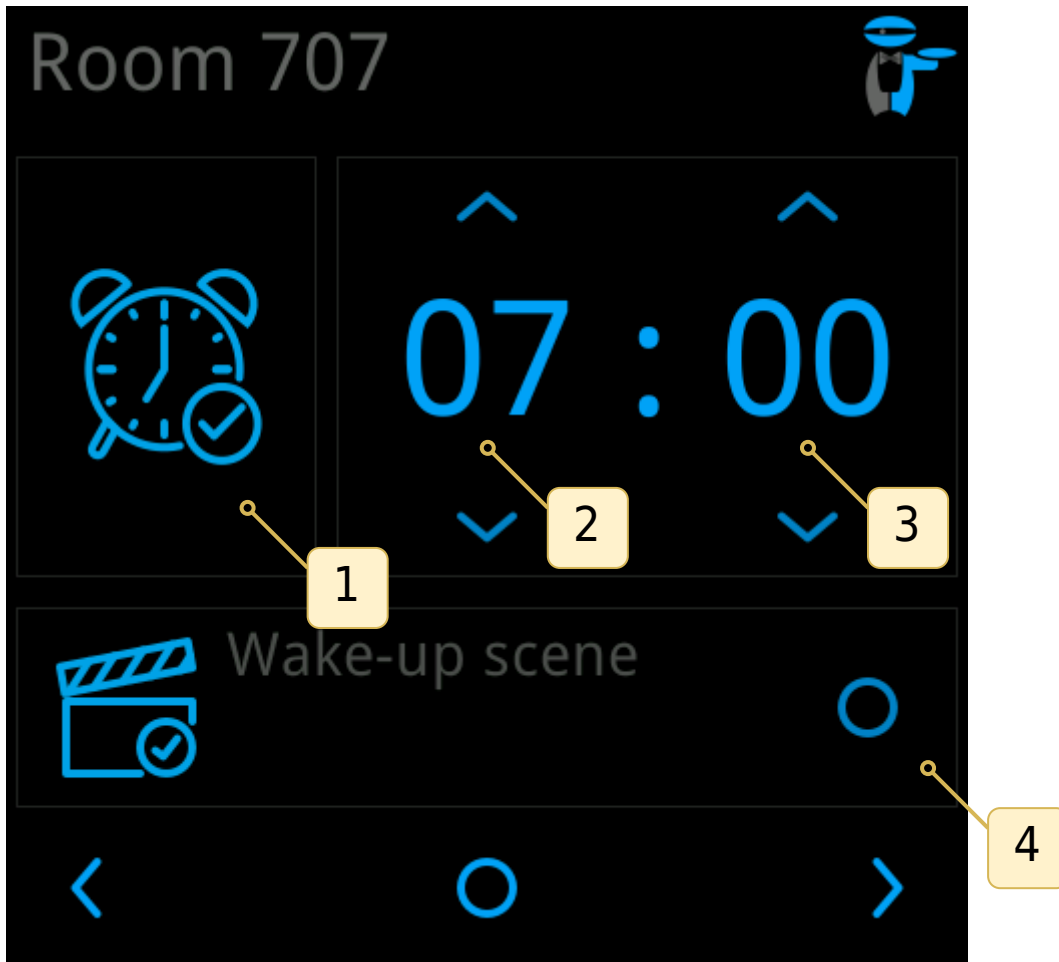

1	Toggle wake-up alarm ON / OFF
2	Set wake-up time
3	Set wake-up
4	Toggle wake-up scene

Alarm

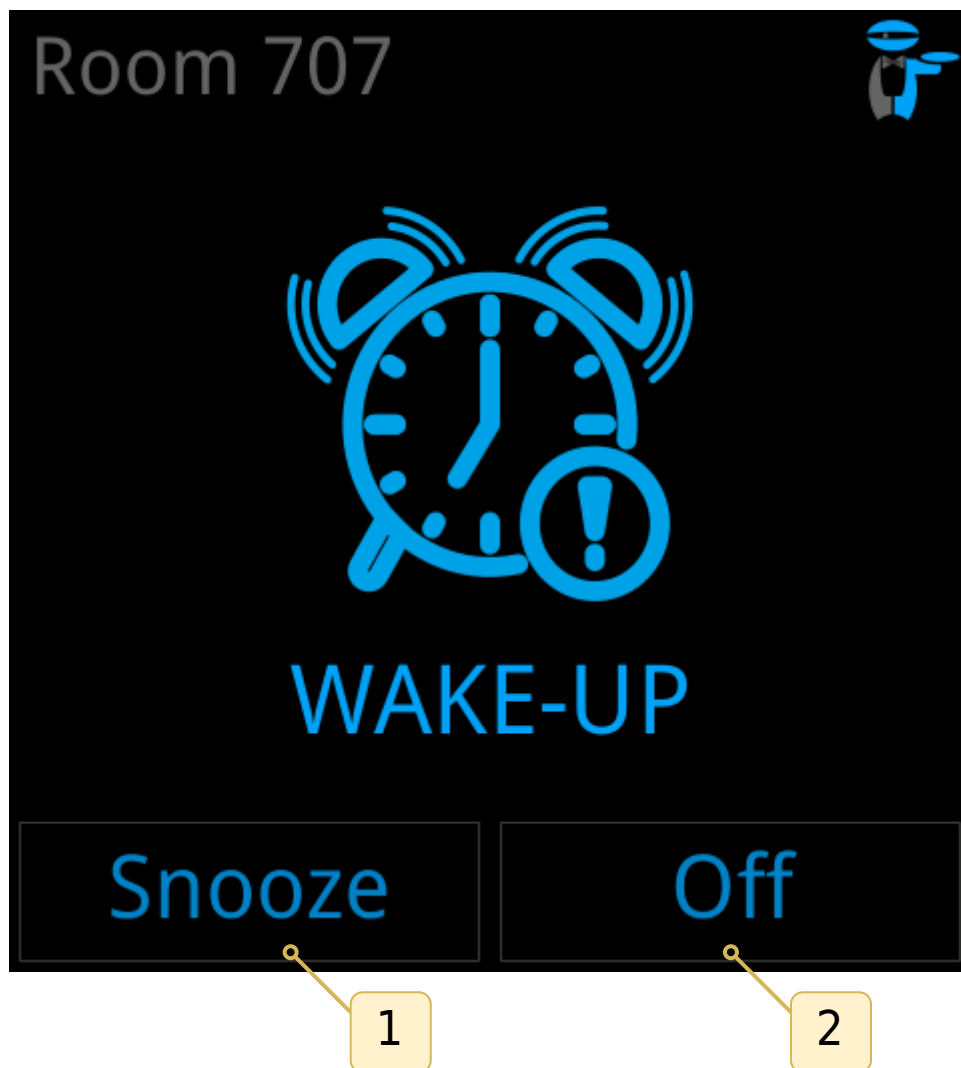


1	Snooze wake-up alarm
2	Turn off wake-up alarm

Door-bell screen

Door-bell screen is activated when door-bell button on corridor panel is pressed.

When the door-bell is activated, the beeper beeps briefly.

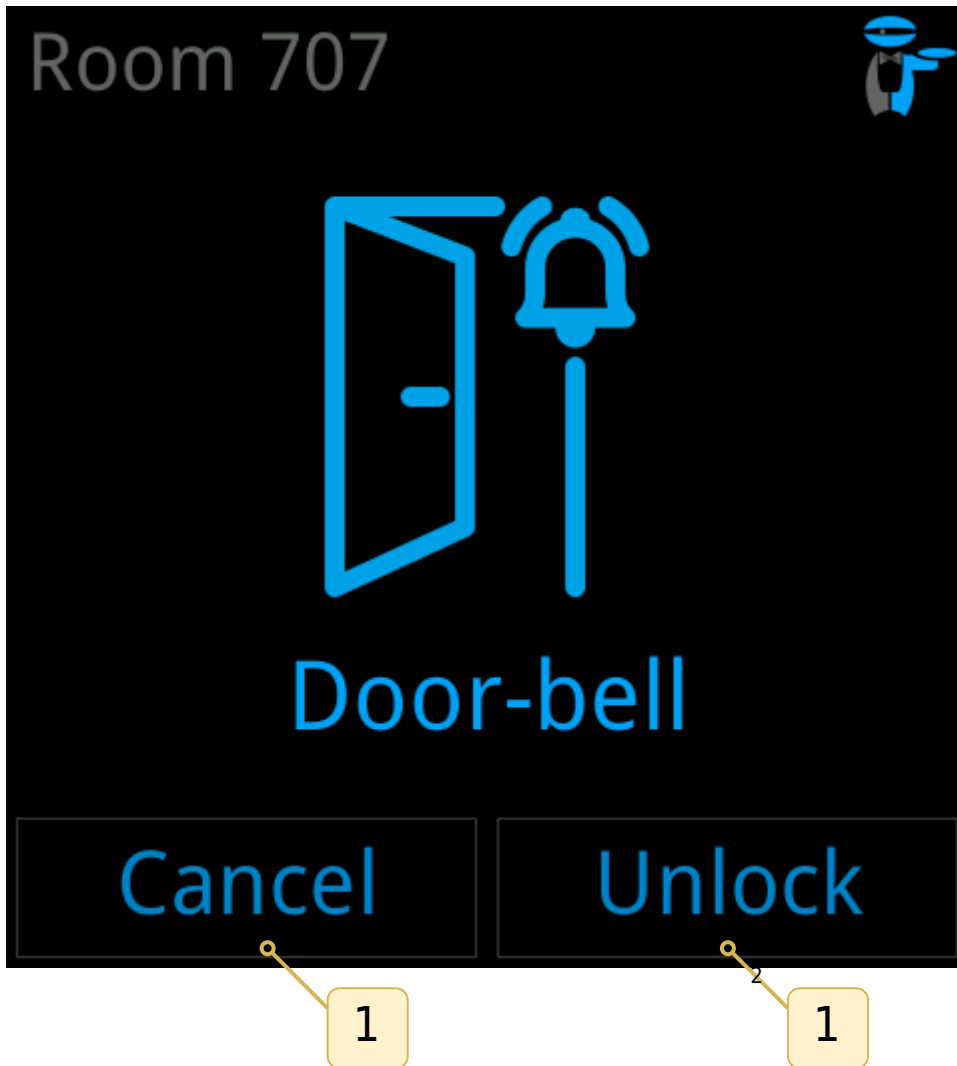


1	Close door-bell screen
2	Unlock door

SOS screen

SOS screen is activated when an SOS pull-switch is activated.

During SOS panel periodically beeps.

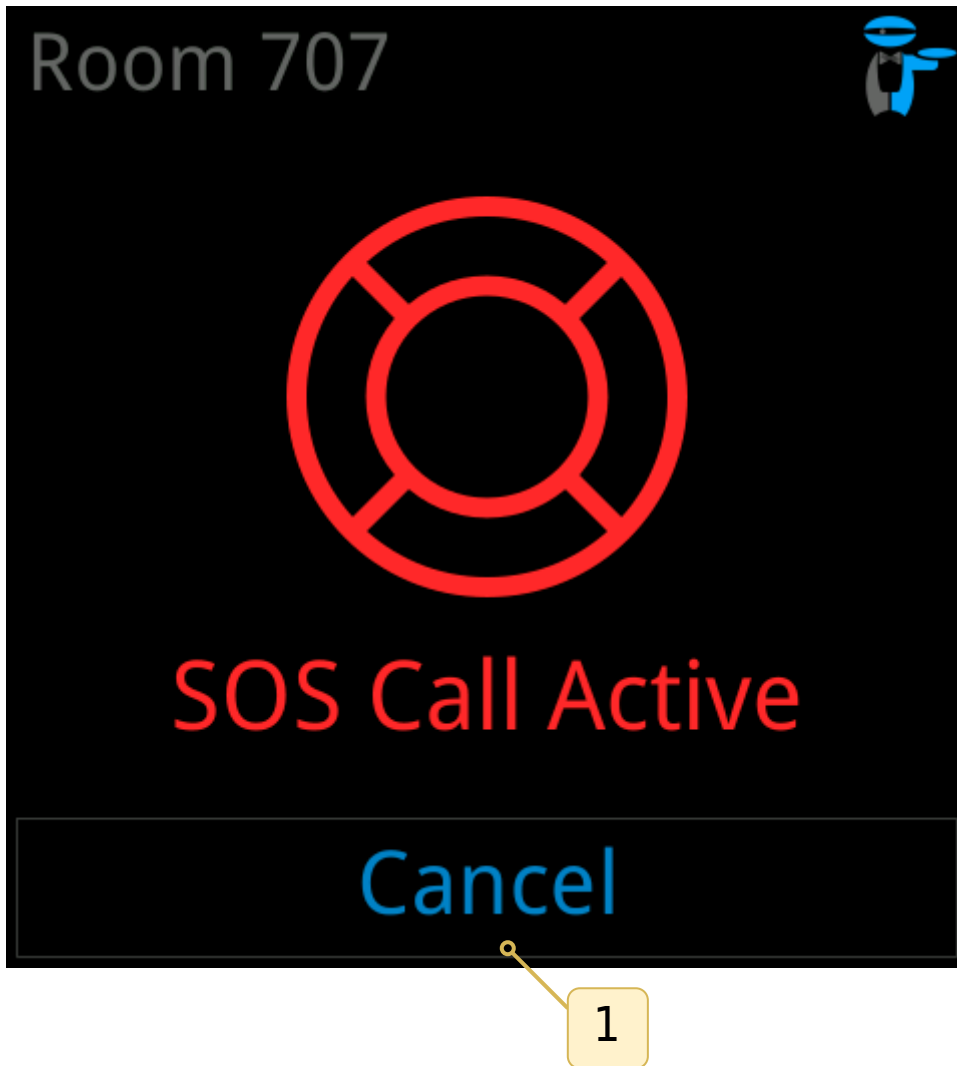**1**

Dismiss off SOS alarm

Fire-alert screen

Fire alert screen is activated when temperature rise is abnormal. It can be activated also externally (from fire control center, reception, ...).

During Fire alert panel periodically beeps.



Fire alert cannot be dismissed from in-room panel.