

! THE PAGE IS UNDER CONSTRUCTION !

Hardware

Low voltage system building blocks

Hybrid Inverters

Description	Grid	Battery	Capacity	Code	Mounting
Low voltage hybrid inverter (Deye)	3-phase	LV	10 kVA	LV-10-3P-01	wall
Low voltage hybrid inverter (Deye)	3-phase	LV	12 kVA	LV-12-3P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	8 kVA	LV-08-1P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	12 kVA	LV-12-1P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	16 kVA	LV-16-1P-01	wall

Batteries

Description	Voltage	Ah	Capacity [kWh]	Code	Mounting
LiFePO4 LV battery module	51.2	200	10.2	RB 512-200-W	wall
LiFePO4 LV battery module	51.2	280	14.3	RB 512-280-W	wall

High voltage system building blocks

Hybrid Inverters

Description	Grid	Battery	Capacity	Code	Mounting
High voltage hybrid inverter (Deye)	3-phase	HV	10 kVA	HV-10-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	15 kVA	HV-15-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	20 kVA	HV-20-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	30 kVA	HV-30-3P-01	wall

Description	Grid	Battery	Capacity	Code	Mounting
High voltage hybrid inverter (Deye)	3-phase	HV	50 kVA	HV-50-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	60 kVA	HV-60-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	70 kVA	HV-70-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	80 kVA	HV-80-3P-01	wall
High voltage battery inverter	3-phase	HV	215 kVA	HV-215-3P-01	standing IP54
High voltage battery inverter	3-phase	HV	430 kVA	HV-430-3P-01	standing IP54
High voltage battery inverter	3-phase	HV	1075 kVA	HV-1075-3P-01	standing IP54

eSTORE all in one solution (Battery rack with inverter)

Rack module RB 512-100-R	No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[W]	Inverter HV-30-3P-01	Inverter HV-50-3P-01	Order code
8	409,6	100	100	40960	40960	eSTORE 410-800-30	eSTORE 410-800-50		
9	460,8	100	100	46080	46080	eSTORE 461-900-30	eSTORE 461-800-50		
10	512	100	100	51200	51200	eSTORE 512-1000-30	eSTORE 512-800-50		
11	563,2	100	100	56320	56320	eSTORE 563-1100-30	eSTORE 563-800-50		
12	614,4	100	100	61440	61440	eSTORE 614-1200-30	eSTORE 614-800-50		
13	665,6	100	100	66560	66560	eSTORE 665-1300-30	eSTORE 665-800-50		
Rack module RB 512-200-R	No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[W]	Inverter HV-50-3P-01	Inverter HV-60-3P-01	Order code
8	409,6	200	100	40960	81920	eSTORE 410-1600-50	eSTORE 410-1600-60		
9	460,8	200	100	46080	92160	eSTORE 461-1800-50	eSTORE 461-1800-60		
10	512	200	100	51200	102400	eSTORE 512-2000-50	eSTORE 512-2000-60		
11	563,2	200	100	56320	112640	eSTORE 563-2200-50	eSTORE 563-2200-60		
12	614,4	200	100	61440	122880	eSTORE 614-2400-50	eSTORE 614-2400-60		
13	665,6	200	100	66560	133120	eSTORE 665-2600-50	eSTORE 665-2600-60		
Rack module RB 512-280-R	No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[W]	Inverter HV-60-3P-01	Inverter HV-75-3P-01	Order code
8	409,6	280	200	81920	114688	eSTORE 410-2240-50	eSTORE 410-2240-60		

Rack module RB 512-100-R						Order code	
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[W]	Inverter HV-30-3P-01	Inverter HV-50-3P-01
9	460,8	280	200	92160	129024	eSTORE 461-2520-50	eSTORE 461-2520-60
10	512	280	200	102400	143360	eSTORE 512-2800-50	eSTORE 512-2800-60
11	563,2	280	200	112400	157696	eSTORE 563-3080-50	eSTORE 563-3080-60
12	614,4	280	200	122880	172032	eSTORE 614-3360-50	eSTORE 614-3360-60
13	665,6	280	200	133120	186368	eSTORE 665-3640-50	eSTORE 665-3640-60

Rack Modules

Description	Voltage	Ah	Capacity [kWh]	Code	Mounting
LiFePO4 LV battery module	51.2	100	5.1	RB 512-100-R	rack
LiFePO4 LV battery module	51.2	200	10.2	RB 512-200-R	rack
LiFePO4 LV battery module	51.2	280	14.3	RB 512-280-R	rack

Freestanding-modular Batteries

Description	Voltage[V]	Capacity [kWh]	Code	Mounting
LiFePO4 High Voltage	230.4	11.52	BA-G3-01-F	Freestanding (modular)
LiFePO4 High Voltage	307.2	15.36	BA-G4-01-F	Freestanding (modular)
LiFePO4 High Voltage	384	19.20	BA-G5-01-F	Freestanding (modular)
LiFePO4 High Voltage	614.4	30.72	BA-G8-01-F	Freestanding (modular)

*Each battery needs its own xEMS controller

Energy Management

Description	Code	Mounting
xEMS compact controller	xEMS-C-01	Wall
xEMS compact controller - Isolated RS485	xEMS-C-01-MB	Wall
xEMS controller - Modular	xEMS-M-01	Wall
Wireless extension modules		Code
Wireless Modbus-to-Modbus bridge	WM-1	
Wireless Modbus relay	WR-1	
Wireless modbus 5 relay, 1 digital input, 1 temperature input	WR-5	

Optional Power Sensors	Code
1-phase power sensor, DIN rail	PM1-E-D
1-phase power sensor, DIN rail, CT	PM1-E-D-CT
3-phase power sensor, DIN rail	PM3-E-D
3-phase power sensor, DIN rail, CT	PM3-E-D-CT
1-phase split core current transformer,50A	CT1-E-50
3-phase split core current transformer,50A,100A, 250A, 400A	CT3-E-XX

Software

Special parameters setting for EMS functionality with Robotina xEMS systems