

! THE PAGE IS UNDER CONSTRUCTION !

Hardware

Low voltage system building blocks

Hybrid Inverters

Description	Grid	Battery	Power [kW]	Code	Mounting
Low voltage hybrid inverter (Deye)	3-phase	LV	10	LV-10-3P-01	wall
Low voltage hybrid inverter (Deye)	3-phase	LV	12	LV-12-3P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	8	LV-08-1P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	12	LV-12-1P-01	wall
Low voltage hybrid inverter (Deye)	1-phase	LV	16	LV-16-1P-01	wall

Batteries

Description	Voltage	Ah	Capacity [kWh]	Code	Mounting
LiFePO4 LV battery module	51.2	200	10.2	RB 512-200-W	wall
LiFePO4 LV battery module	51.2	280	14.3	RB 512-280-W	wall

High voltage system building blocks

Hybrid Inverters

Description	Grid	Battery	Power [kWh]	Code	Mounting
High voltage hybrid inverter (Deye)	3-phase	HV	10	HV-10-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	15	HV-15-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	20	HV-20-3P-01	wall

Description	Grid	Battery	Power [kWh]	Code	Mounting
High voltage hybrid inverter (Deye)	3-phase	HV	30	HV-30-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	50	HV-50-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	60	HV-60-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	70	HV-70-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	75	HV-75-3P-01	wall
High voltage hybrid inverter (Deye)	3-phase	HV	80	HV-80-3P-01	wall

eSTORE all in one solution (Battery rack with inverter)

Battery module RB 512-100-R						Order code	
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Inverter HV-30-3P-01	Inverter HV-50-3P-01
8	409,6	100	100	40960	40960	eSTORE 410-800-30-0	eSTORE 410-800-50-0
9	460,8	100	100	46080	46080	eSTORE 461-900-30-0	eSTORE 461-900-50-0
10 (recomended)	512	100	100	51200	51200	eSTORE 512-1000-30-0	eSTORE 512-1000-50-0
11	563,2	100	100	56320	56320	eSTORE 563-1100-30-0	eSTORE 563-1100-50-0
12	614,4	100	100	61440	61440	eSTORE 614-1200-30-0	eSTORE 614-1200-50-0
13	665,6	100	100	66560	66560	eSTORE 665-1300-30-0	eSTORE 665-1300-50-0
Battery module RB 512-200-R						Order code	
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Inverter HV-50-3P-01	Inverter HV-60-3P-01
8	409,6	200	100	40960	81920	eSTORE 410-1600-50-0	eSTORE 410-1600-60-0
9	460,8	200	100	46080	92160	eSTORE 461-1800-50-0	eSTORE 461-1800-60-0
10 (recomended)	512	200	100	51200	102400	eSTORE 512-2000-50-0	eSTORE 512-2000-60-0
11	563,2	200	100	56320	112640	eSTORE 563-2200-50-0	eSTORE 563-2200-60-0
12	614,4	200	100	61440	122880	eSTORE 614-2400-50-0	eSTORE 614-2400-60-0
13	665,6	200	100	66560	133120	eSTORE 665-2600-50-0	eSTORE 665-2600-60-0
Battery module RB 512-280-R						Order code	
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Inverter HV-60-3P-01	Inverter HV-75-3P-01
8	409,6	280	200	81920	114688	eSTORE 410-2240-60-0	eSTORE 410-2240-75-0
9	460,8	280	200	92160	129024	eSTORE 461-2520-60-0	eSTORE 461-2520-75-0
10 (recomended)	512	280	200	102400	143360	eSTORE 512-2800-60-0	eSTORE 512-2800-75-0
11	563,2	280	200	112400	157696	eSTORE 563-3080-60-0	eSTORE 563-3080-75-0

Battery module RB 512-100-R						Order code	
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Inverter HV-30-3P-01	Inverter HV-50-3P-01
12	614,4	280	200	122880	172032	eSTORE 614-3360-60-O	eSTORE 614-3360-75-O
13	665,6	280	200	133120	186368	eSTORE 665-3640-60-O	eSTORE 665-3640-75-O

eSTORE High Voltage batteries (HV Battery rack without inverter)

Battery module RB 512-100-R						
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Order code
8	409,6	100	100	40960	40960	eSTORE 410-800-O
9	460,8	100	100	46080	46080	eSTORE 461-900-O
10 (recomended)	512	100	100	51200	51200	eSTORE 512-1000-O
11	563,2	100	100	56320	56320	eSTORE 563-1100-O
12	614,4	100	100	61440	61440	eSTORE 614-1200-O
13	665,6	100	100	66560	66560	eSTORE 665-1300-O
Battery module RB 512-200-R						
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Order code
8	409,6	200	100	40960	81920	eSTORE 410-1600-O
9	460,8	200	100	46080	92160	eSTORE 461-1800-O
10 (recomended)	512	200	100	51200	102400	eSTORE 512-2000-O
11	563,2	200	100	56320	112640	eSTORE 563-2200-O
12	614,4	200	100	61440	122880	eSTORE 614-2400-O
13	665,6	200	100	66560	133120	eSTORE 665-2600-O
Battery module RB 512-280-R						
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Order code
8	409,6	280	200	81920	114688	eSTORE 410-2240-O
9	460,8	280	200	92160	129024	eSTORE 461-2520-O
10 (recomended)	512	280	200	102400	143360	eSTORE 512-2800-O
11	563,2	280	200	112400	157696	eSTORE 563-3080-O

Battery module RB 512-100-R						
No. of modules	Voltage[V]	Capacity[Ah]	Current[A]	Nominal Power[W]	Capacity[Wh]	Order code
12	614,4	280	200	122880	172032	eSTORE 614-3360-O
13	665,6	280	200	133120	186368	eSTORE 665-3640-O

Battery Modules

Description	Voltage	Ah	Capacity [kWh]	Code	Mounting
LiFePO4 LV battery module	51.2	100	5.1	RB 512-100-R	rack
LiFePO4 LV battery module	51.2	200	10.2	RB 512-200-R	rack
LiFePO4 LV battery module	51.2	280	14.3	RB 512-280-R	rack

Freestanding-modular Batteries

Description	Voltage[V]	Capacity [kWh]	Code	Mounting
LiFePO4 High Voltage	230.4	11.52	RBG3-01-F	Freestanding (modular)
LiFePO4 High Voltage	307.2	15.36	RBG4-01-F	Freestanding (modular)
LiFePO4 High Voltage	384	19.20	RBG5-01-F	Freestanding (modular)
LiFePO4 High Voltage	614.4	30.72	RBG8-01-F	Freestanding (modular)

***Each battery needs its own xEMS controller**

Energy Management

Description	Code	Mounting
xEMS compact controller	xEMS-C-01	Wall
xEMS compact controller - Isolated RS485	xEMS-C-01-MB	Wall
xEMS controller - Modular	xEMS-M-01	Wall
Wireless extension modules		Code
Wireless Modbus-to-Modbus bridge		WM-1
Wireless Modbus relay		WR-1
Wireless modbus 5 relay, 1 digital input, 1 temperature input		WR-5
Optional Power Sensors		Code
1-phase power sensor, DIN rail		PM1-E-D
1-phase power sensor, DIN rail, CT		PM1-E-D-CT
3-phase power sensor, DIN rail		PM3-E-D

Optional Power Sensors	Code
3-phase power sensor, DIN rail, CT	PM3-E-D-CT
1-phase split core current transformer,50A	CT1-E-50
3-phase split core current transformer,50A,100A, 250A, 400A	CT3-E-XX

Software

Special parameters setting for EMS functionality with Robotina xEMS systems

[RBHV 512-200-RA](#)

[RBHV 512-200-RA-O](#)

[RBHV 512-100-RA](#)

[RBHV 512-100-RA-O](#)