

RDC Charger

User manual



Robotina test d.o.o.

OIC-Hrpelje 38 Hrpelje
SI-6240 Kozina
Slovenia

Table of Contents

Wireless modules WR-1 / WM-1 5

Wireless modules WR-1 / WM-1

[WR-1](#) module is **Wireless Relay**. [WM-1](#) module is **Wireless Modbus** to modbus bridge. Check wiring possibilities at [wiring](#) page.

Bind a new module(s):

- [settings](#) page → **WM/WR binding**,
- turn ON target module(s),
- within 10 seconds press **Bind module(s)**.



Search for new devices after module(s) binding:

- [settings](#) page → **Scan wireless dev.**
- if [power sensor](#) is detected, message will appear on [settings](#) page under **new device** or next to source/consumer device (add it to required position - [Power sensor adding](#))



- and/or when WR module is recognized by EVSE, it will be positioned on [io mux](#) page based on set address by jumper: WR-1 address 200 is assigned to WR 1 position, 201 → WR 2, etc...

