

# RDC Charger

## User manual



**Robotina test d.o.o.**

OIC-Hrpelje 38 Hrpelje  
SI-6240 Kozina  
Slovenia



# Table of Contents

**Wireless modules WR-1 / WM-1** ..... 5



# Wireless modules WR-1 / WM-1

[WR-1](#) module is **W**ireless **R**elay. [WM-1](#) module is **W**ireless **M**odbus to modbus bridge. Check wiring possibilities at [wiring](#) page.

Bind a new module(s):

- [settings](#) page → **WM/WR binding**,
- turn ON target module(s),
- within 10 seconds press **Bind module(s)**.



Search for new devices after module(s) binding:

- [settings](#) page → **Scan w-less dev.**
- if [power sensor](#) is detected, message will appear on [settings](#) page under **new device** or next to source/consumer device (add it to required position - [Power sensor adding](#))



- and/or when WR module is recognized by EVSE, it will be positioned on [io mux](#) page based on set address by jumper: WR-1 address 200 is assigned to WR 1 position, 201 → WR 2, etc...

