

# Controller IP settings

Download and unzip: [CyBroBinLoader](#)

From unzipped folder run "CyBroBinLoader.exe"

Connect controller and PC (laptop) to:

1. **LAN** (Router with DHCP server) **OR**
2. **Direct** (just cable between PC and controller)

<b>1</b>	Select network adapter
<b>2</b>	Select "Direct connection" if controller is directly connected to PC
<b>3</b>	Select controller NAD
<b>4</b>	Configure IP settings
<b>5</b>	Send settings to controller

