

BM-GW WEB UI

- Demo: [BTMS BM-GW WEB UI demo](#)
- User: demo
- Pass: demo

Log-in



1st time log in:

- Connect Ethernet 2 port to facility LAN
- Connect PC to Ethernet 1 port (standard Ethernet cable between PC and BM-GW Ethernet 1 port)
- For PC Ethernet connection set fixed IP 192.168.10.200.
- Use the Internet browser to go to <https://192.168.10.1>
- Log in as:
 - user: admin
 - password: bmgw!admin
- Check the WAN IP address on the Data center - Settings page and set it if necessary



- Connect the PC to the facility LAN and go to the <https://IP> address of the WAN port

General description



1	Pages tabs
2	Data center tree structure
3	Page data

Data center

Real-time data



1	Tabular display of data for the Data Center
2	Select a parameter for the graphic display
3	Graphic bar-graph data display for the data center

Discharge data



1	Discharge events table
2	String time-plot for discharge event
3	Cell time-plot for discharge event

String time-plot for discharge event



Cell time-plot for discharge event



1	Cell selection
---	----------------

Alarm



1	Alarms sub-page selection
2	Alarms table

E-mails



SMS



Settings

Network settings, NTP settings



Time settings, Users



SNMP settings, SMS notifications, Project settings, Data export



UPS

Real-time data



History data



Discharge data



String time-plot



Cell time-plot



Alarm



String

Real-time data

String



Cells



History data

String



Cells



Discharge data



String time-plot



Cell time-plot



Alarm



Settings



Enable for which alarm SMS / e-mail will be sent.