

Battery Monitoring System

(Battery monitoring system for larger UPS systems)

MODBUS MANUAL

Table of content

1. UPS Modbus registers.....	3
2. String Modbus registers.....	6
3. Cell Modbus registers	8
4. Legend.....	9

1. Introduction

The purpose of the BTMS Controller MODBUS TCP/IP communications protocol is to allow that all measured data to be efficiently transferred between a MODBUS Master Station (SCADA or BMS) and a BT-C.

Data Encoding

MODBUS uses a 'big-endian' representation for addresses and data items. This means that when a numerical quantity larger than a single byte is transmitted, the MOST significant byte is sent first. So, for example:

type		value	1 st byte	2 nd byte	3 rd byte	4 th byte
int	16 bits	0x1234	0x12	0x34	/	/
long	32 bits	0x12345678	0x12	0x34	0x56	0x78

Example

Read UPS Voltage (Address: 1, Type: int, Scale: 0.01):

Sent message:

0x00	0x01	0x00	0x00	0x00	0x06	0x01	0x03	0x00	0x01	0x00	0x02
Transaction ID		Protocol ID		Length		Unit ID	Function code	Address		Quantity of registers	

Received message:

0x00	0x01	0x00	0x00	0x00	0x06	0x01	0x03	0x04	0x00	0x12	0xD6	0x87
Transaction ID		Protocol ID		Length		Unit ID	Function code	Byte count	Register values			

0x0012D687 = 1234567 => 12345,67 V

More detailed information about the Modbus TCP/IP protocol can be found here:
<https://www.simplymodbus.ca/TCP.htm>.

The free Modbus communication testing application QModMaster can be obtained here:
<https://sourceforge.net/projects/qmodmaster/>.

2. Modbus registers

UPS

var	Unit ID	address	type	scale	Origin	description
ups_status	ui	0	int	-		UPS status (0 = disabled, 1 = OK (all strings OK), 2 = ERR (at least one string error))
ups_voltage	ui	1	long	0.01		UPS voltage (average of strings voltages) [0.01 V]
ups_current	ui	3	long	0.01		UPS current (sum of string currents) [0.01 A]; + = charge, - = discharge
ups_soc	ui	5	int	1		UPS state of charge (average of strings SOC) [%]
alarms_sum	-	91	long	1		Sum of all alarms

String

si = string index (0-7)

var	Unit ID	address	type	scale	Origin	description
string_status	100+si	20 + 2440 × si	int	-		String status (0 = disabled, 1 = OK, 2 = Error)
string_voltage	100+si	21 + 2440 × si	long	0.01		String voltage [0.01 V]
string_current	100+si	23 + 2440 × si	long	0.01		String current [0.01 A]; + = charge, - = discharge
string_soc	100+si	25 + 2440 × si	int	1		String state of charge [%]
string_ballance	100+si	26 + 2440 × si	long	0.01		String balancing state [%]
string_state	100+si	28 + 2440 × si	int	-		0=floating charge, 1=equalizing charge, 2=discharge, 3=idle, 5=abnormal
string_alarm	100+si	29 + 2440 × si	int	-		bit coded; b0=current hi (charging), b1=current lo (discharging), b2=voltage hi, b3=voltage lo, b4=SOC lo, b5=SOH lo, b6=hall disconnected
string_cell_count	100+si	30 + 2440 × si	int	1		Number of string cells
string_ambient_temperature	100+si	31 + 2440 × si	long	0.1		String ambient temperature [0.1 °C]
string_ambient_humidity	100+si	33 + 2440 × si	int	1		String ambient relative humidity [% RH]

string_relay_status	100+si	34 + 2440 × si	int			String relay status (0=open, 1=closed)
---------------------	--------	-------------------	-----	--	--	---

Cell

si = string index (0...7) ci = cell index (0...119)

var	Unit ID	address	type	scale	Origin	description
cell_status	100+si	60 + 2440 × si + 20 × ci	int	-		Cell status (0=disabled, 1=OK, 2=error)
cell_voltage	100+si	61 + 2440 × si + 20 × ci	long	0.001		Cell voltage [0.001 V]
cell_resistance	100+si	63 + 2440 × si + 20 × ci	long	0.001		Cell resistance [0.001 mΩ]
cell_temperature	100+si	65 + 2440 × si + 20 × ci	long	0.1		Cell temperature [0.1 °C]
cell_soc	100+si	67 + 2440 × si + 20 × ci	int	1		Cell state of charge [%]
cell_soh	100+si	68 + 2440 × si + 20 × ci	int	1		Cell state of health [%]
cell_alarm	100+si	69 + 2440 × si + 20 × ci	int	-		Cell alarm (bit coded): b0=voltage hi, b1=voltage lo, b2=resistance hi, b3=SOC lo, b4=SOH lo, b5=temperature hi
cell_remaining_time	100+si	70 + 2440 × si + 20 × ci	long	0.1		Cell remaining time [0.1 h]
cell_status	100+si	60 + 2440 × si + 20 × ci	int	-		Cell status (0=disabled, 1=OK, 2=error)
cell_voltage	100+si	61 + 2440 × si + 20 × ci	long	0.001		Cell voltage [0.001 V]
cell_resistance	100+si	63 + 2440 × si + 20 × ci	long	0.001		Cell resistance [0.001 mΩ]

Legend

type	
int	16 bits signed (-32768...32767)
long	32 bits signed (-2147483648...2147483647)
scale	
0.01	12345 → 123.45
Origin	
IC	Internal Calculation
SS	String Sensor
MC	Master Controller

The information in this manual is subject to change without notice. Robotina assumes no responsibility for any errors that may appear in this document.

In no case is Robotina liable for incidental or consequential damages arising from the use of this manual or the software or hardware described in this document.

This document may not be reproduced or copied without the written permission of Robotina, and the contents may not be given to a third party or used for any unauthorized purpose.