Robotina d.o.o.
OIC Hrpelje 38
SI-6240 Kozina
Slovenia

1. Manual BM-GW Time Settings

If the BM-GW does not have access to the NTC Server (Internet), it is necessary to disable date and time synchronization via the NTP server and set the date and time manually.


1. Disable NTP

Select the root in the tree structure on the left (Data Center) and then go to the Settings page.

Scroll down to NTP settings section and press Edit button.

Disable both “Enable custom NTP pool” and “Enable default NTP pools” and confirm with the Save button.


The Edit button in the Time settings section should become enabled.

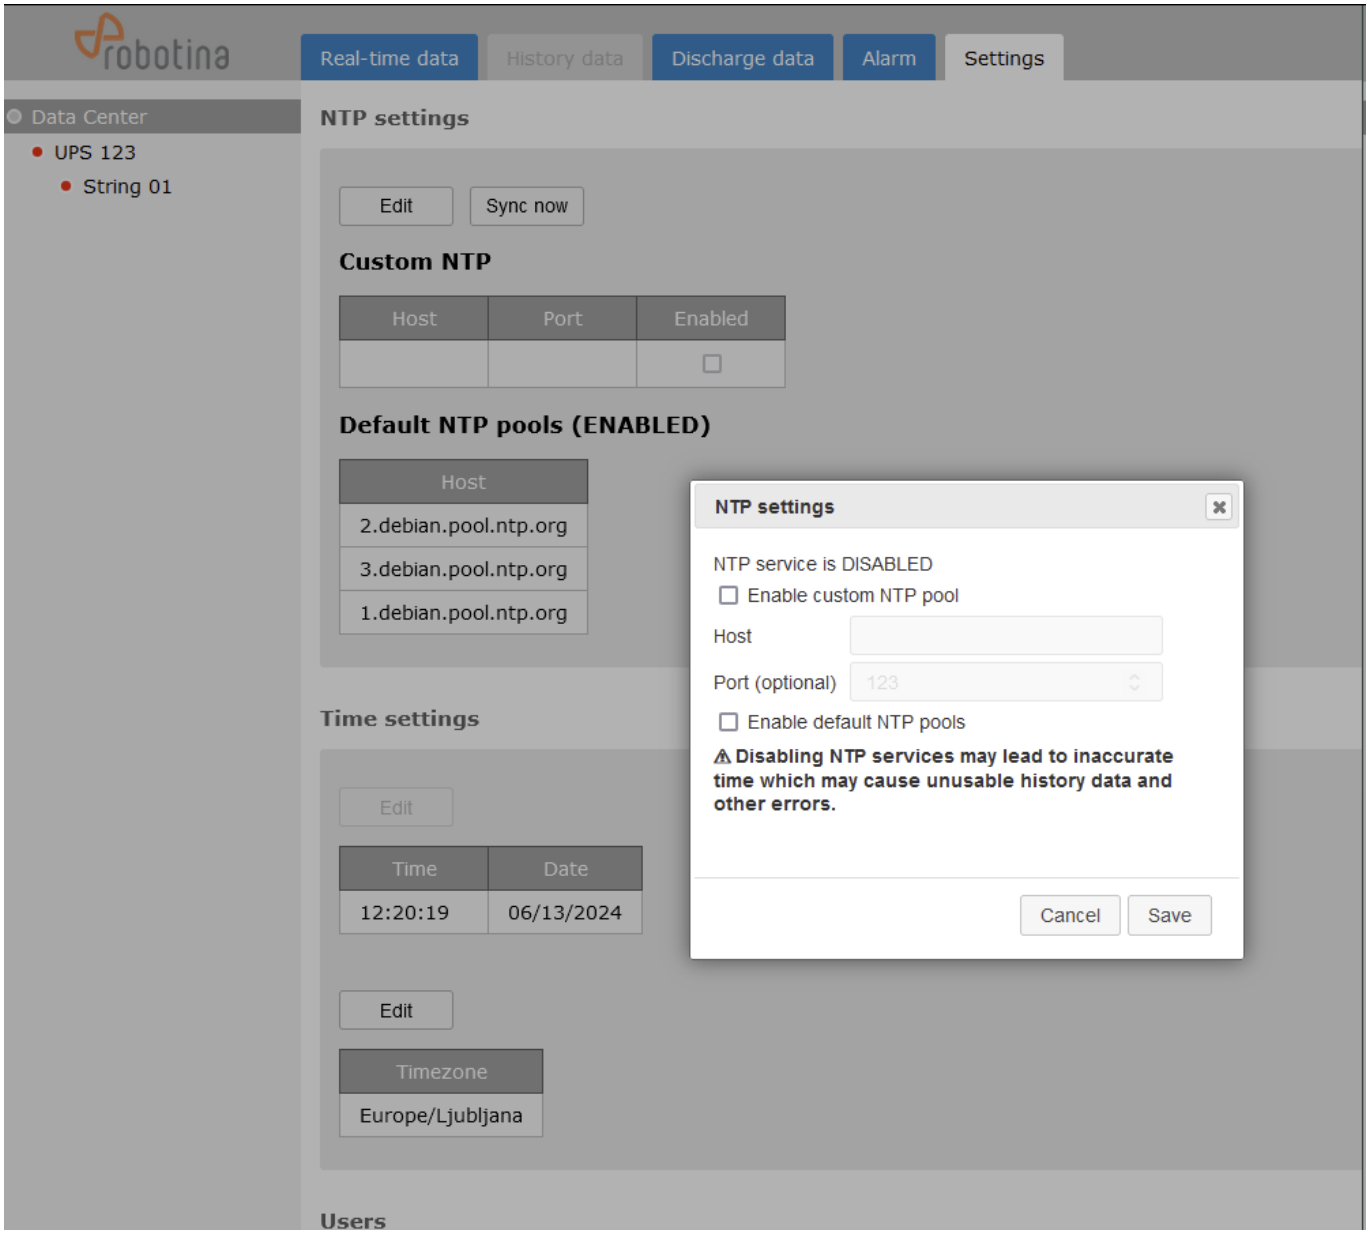

2. Set date and time

In “Time settings” section press Edit button.

Set the date and time, then press the Set button.

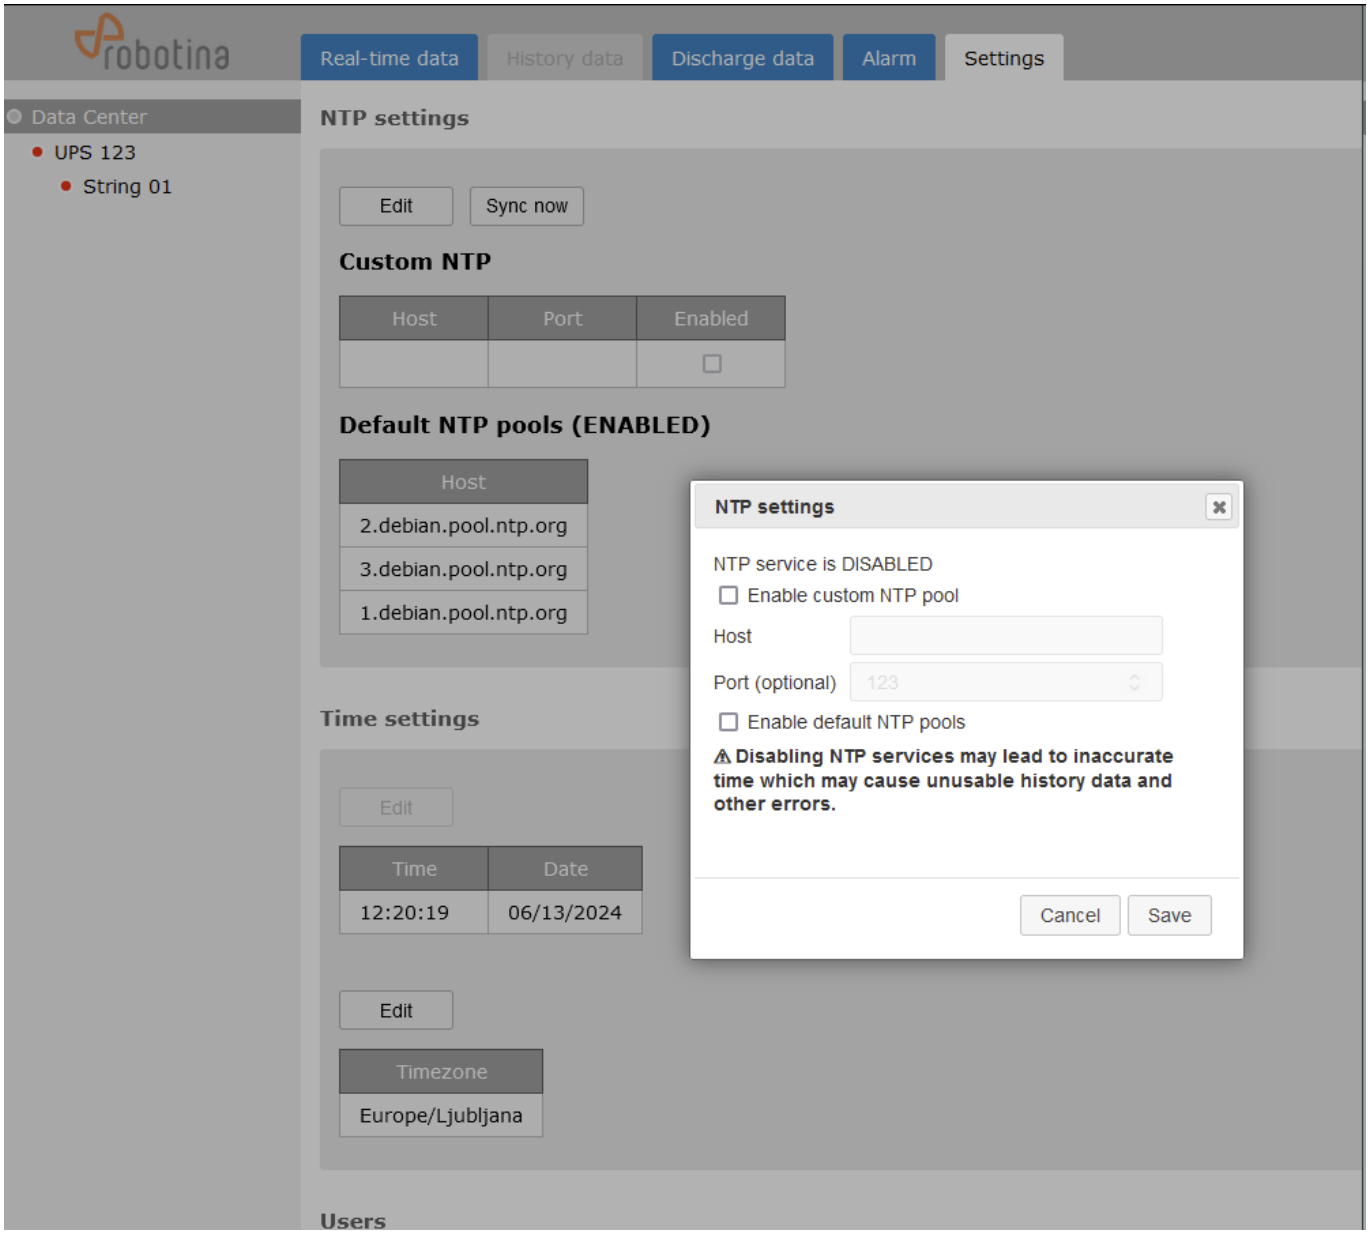
Real-time data
History data
Discharge data
Alarm
Settings
Data Center
UPS 123
String 01
NTP settings
Edit
Sync now
Custom NTP
Host
Port
Enabled
Default NTP pools (ENABLED)
Host
2.debian.pool.ntp.org
3.debian.pool.ntp.org
1.debian.pool.ntp.org
NTP settings
NTP service is DISABLED
Enable custom NTP pool
Host
Port (optional)
123
Enable default NTP pools
⚠ Disabling NTP services may lead to inaccurate time which may cause unusable history data and other errors.
Cancel
Save
Time settings
Edit
Time
Date
12:20:19
06/13/2024
Edit
Timezone
Europe/Ljubljana
Users