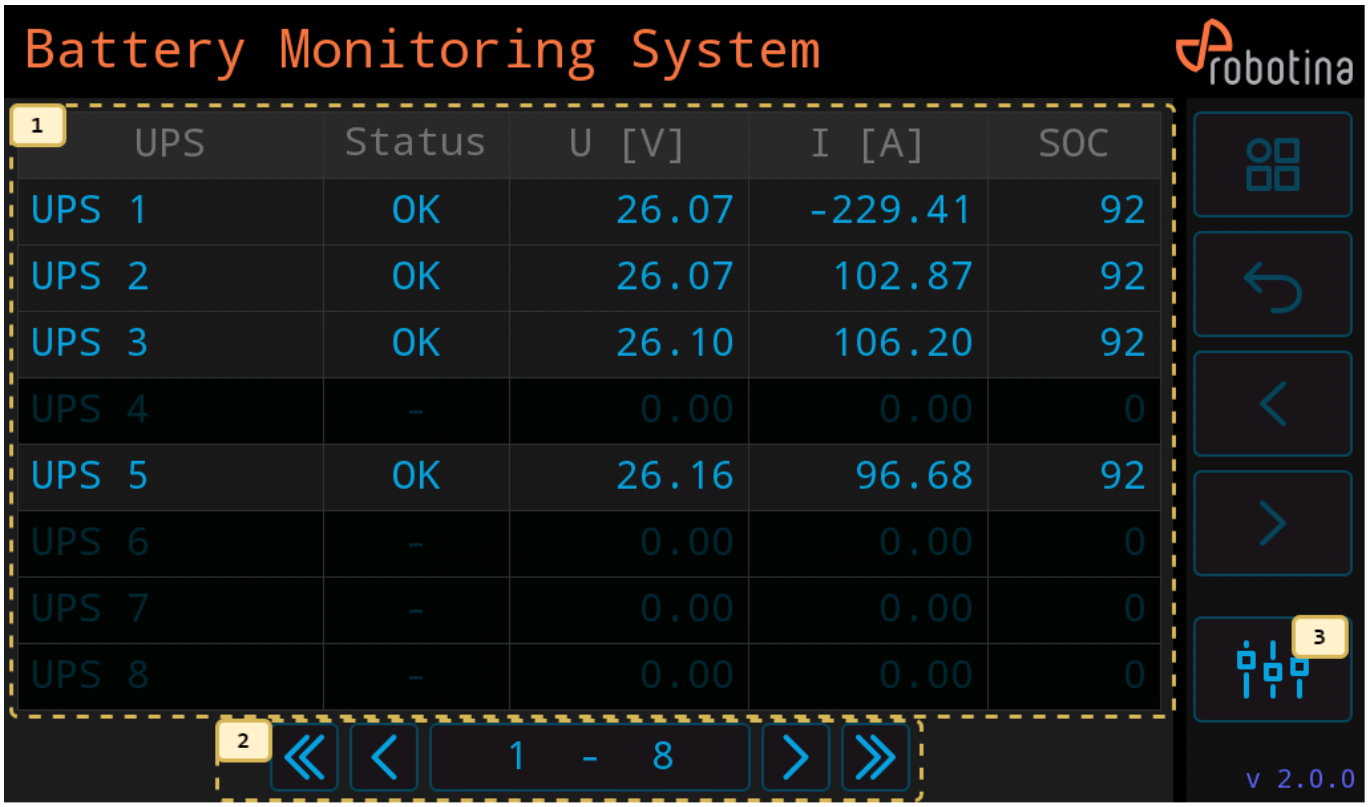
**Robotina d.o.o.**
OIC Hrpelje 38
SI-6240 Kozina
Slovenia

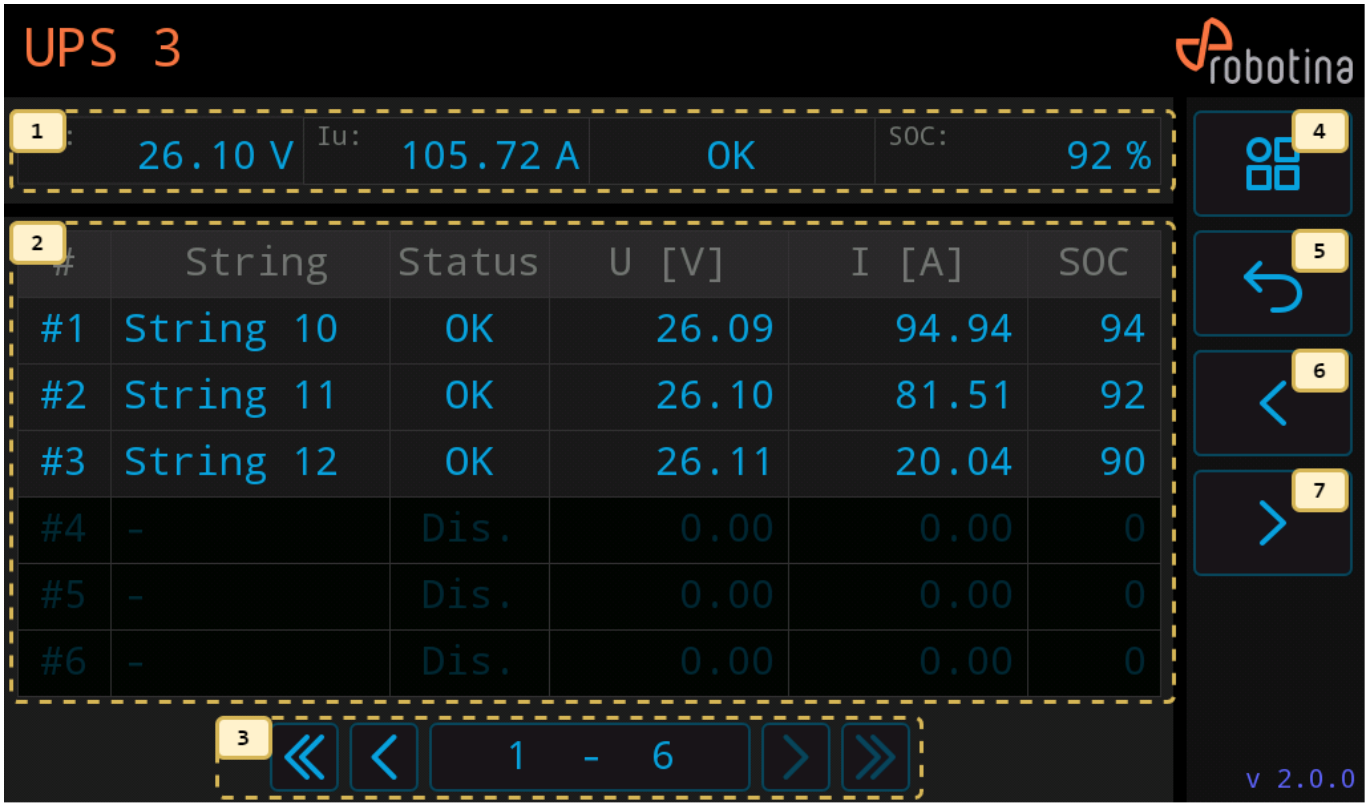
# 1. BM-HMI UI

## 1.1. Main screen



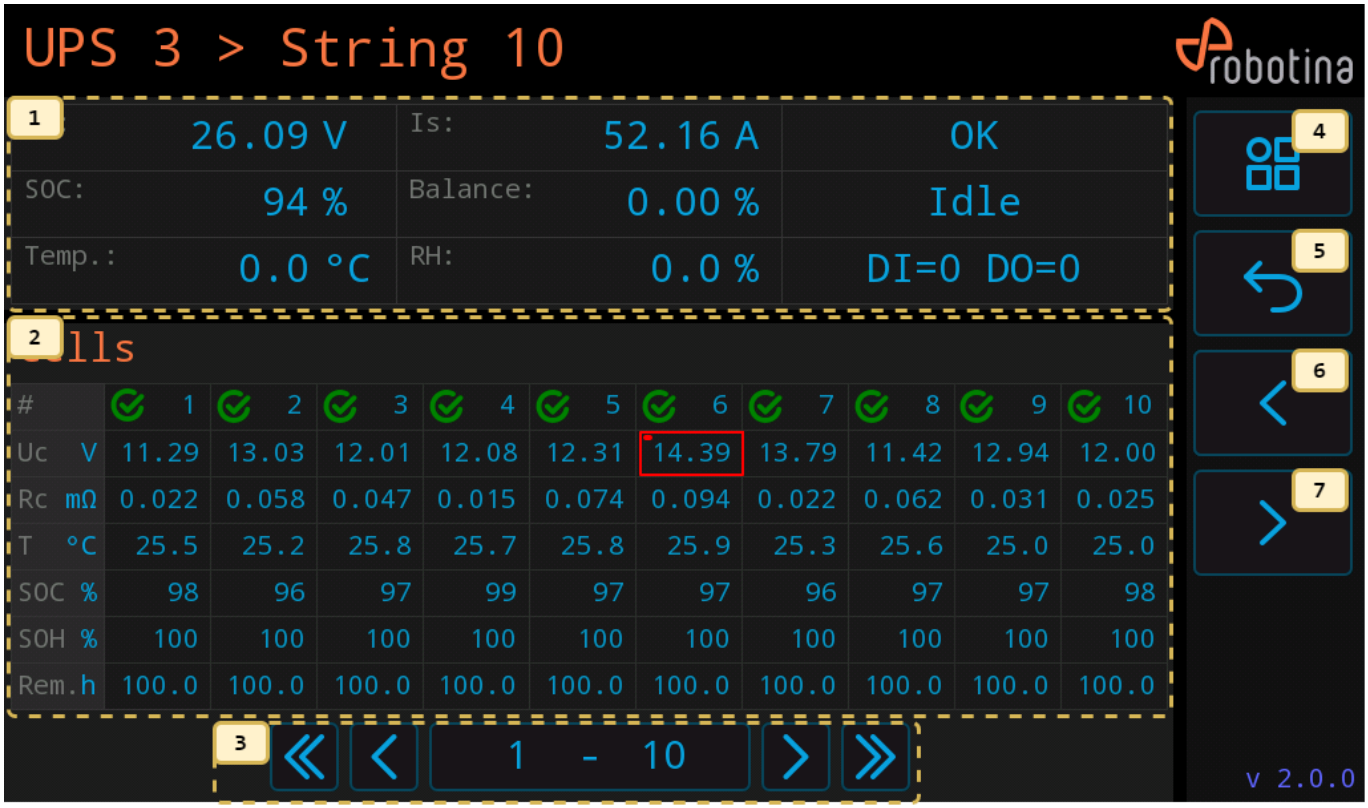

| | |
|---|---|
| **1** | UPS data |
| | - tap to display UPS details |
| **2** | UPS navigation buttons |
| | - first ups |
| | - previous 8 UPS |
| | - next 8 UPS |
| | - last 8 UPS |
| **3** | Settings screen |

## 1.2. UPS screen




| | |
|---|---|
| **1** | UPS data |
| **2** | String data |
| | - tap to display String details |
| **3** | String navigation |
| **4** | Main screen |
| **5** | Previous screen |
| **6** | Previous UPS |
| **7** | Next UPS |

## 1.3. String screen



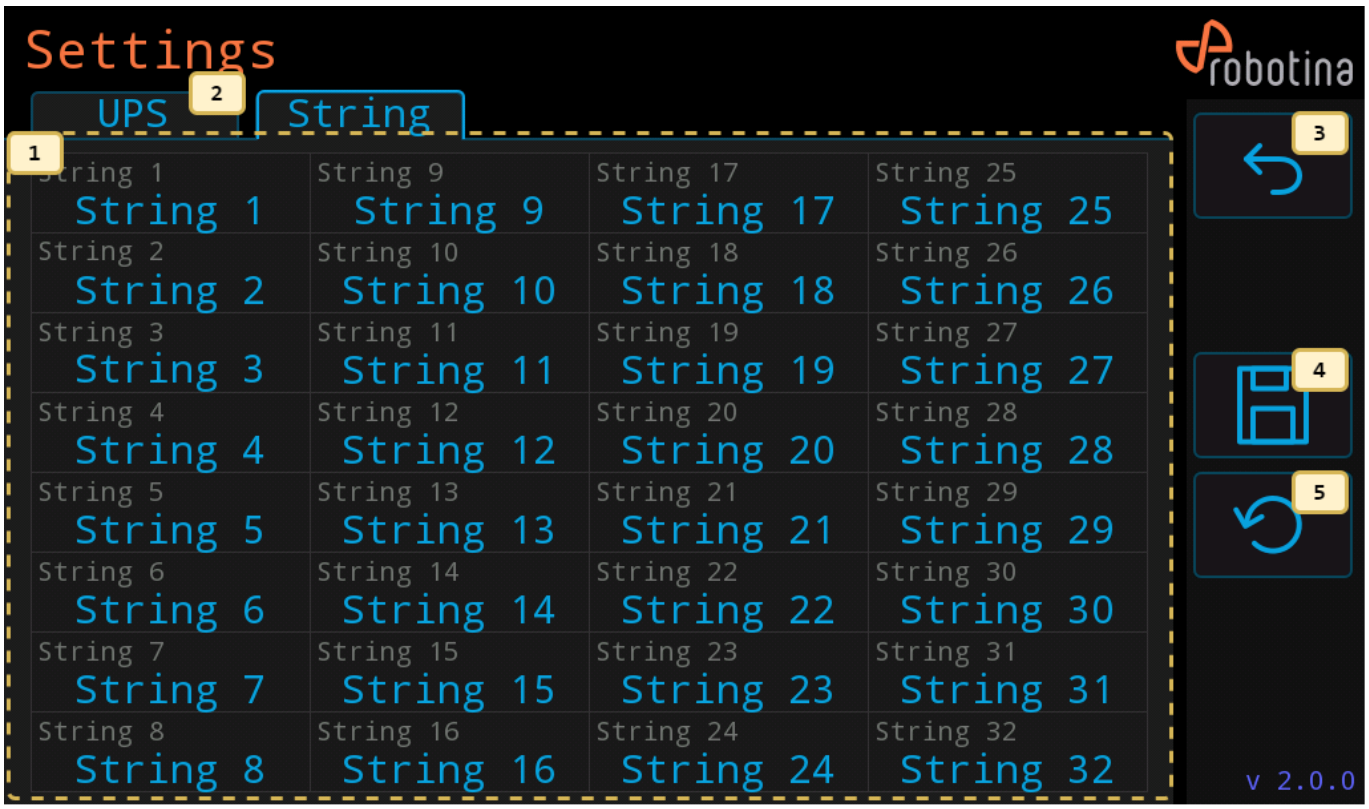

| | |
|---|---|
| **1** | String detailed data |
| **2** | Cells data |
| **3** | Cell navigation |
| **4** | Main screen |
| **5** | Previous screen |
| **6** | Previous String |
| **7** | Next String |

## 1.4. UPS names screen




| | |
|---|---|
| **1** | UPS names<br>- tap to edit name |
| **2** | go to String names screen |
| **3** | Previous page |
| **4** | Save names to Flash memory |
| **5** | Restore default names |

## 1.5. String names screen




| | |
|---|---|
| **1** | String names<br>- tap to edit name |
| **2** | go to String names screen |
| **3** | Previous page |
| **4** | Save names to Flash memory |
| **5** | Restore default names |