Robotina d.o.o.
OIC Hrpelje 38
SI-6240 Kozina
Slovenia




1. TGP touch panel

1.1. Corridor

The panel in the corridor displays the hotel logo, room number and, in the bottom line, the status of the access code reader, the DND or MUR icon and the door-bell button.



1	Hotel Logo
2	Room number
3	Access code reader status
4	DND / MUR status
5	Door-bell button

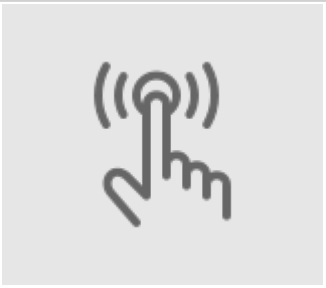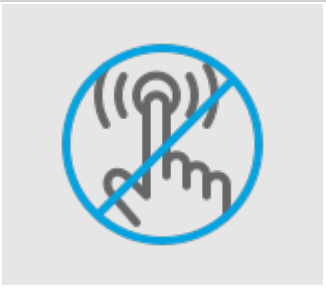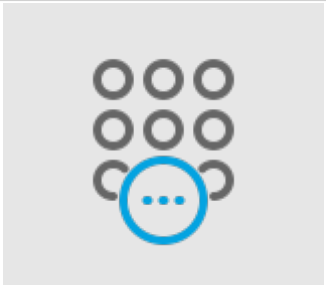
Access code reader type	DND / MUR status	Door-bell button
 QR code & RFID card reader	No DND or MUR	 Door-bell enabled
 RFID card reader	 DND active	 Door-bell disabled
 Keypad (touch to show keypad)	 MUR active	

1.2. In room

1.2.1. Idle screen


Day time	Night / Low-light
	

1.2.2. Main screen

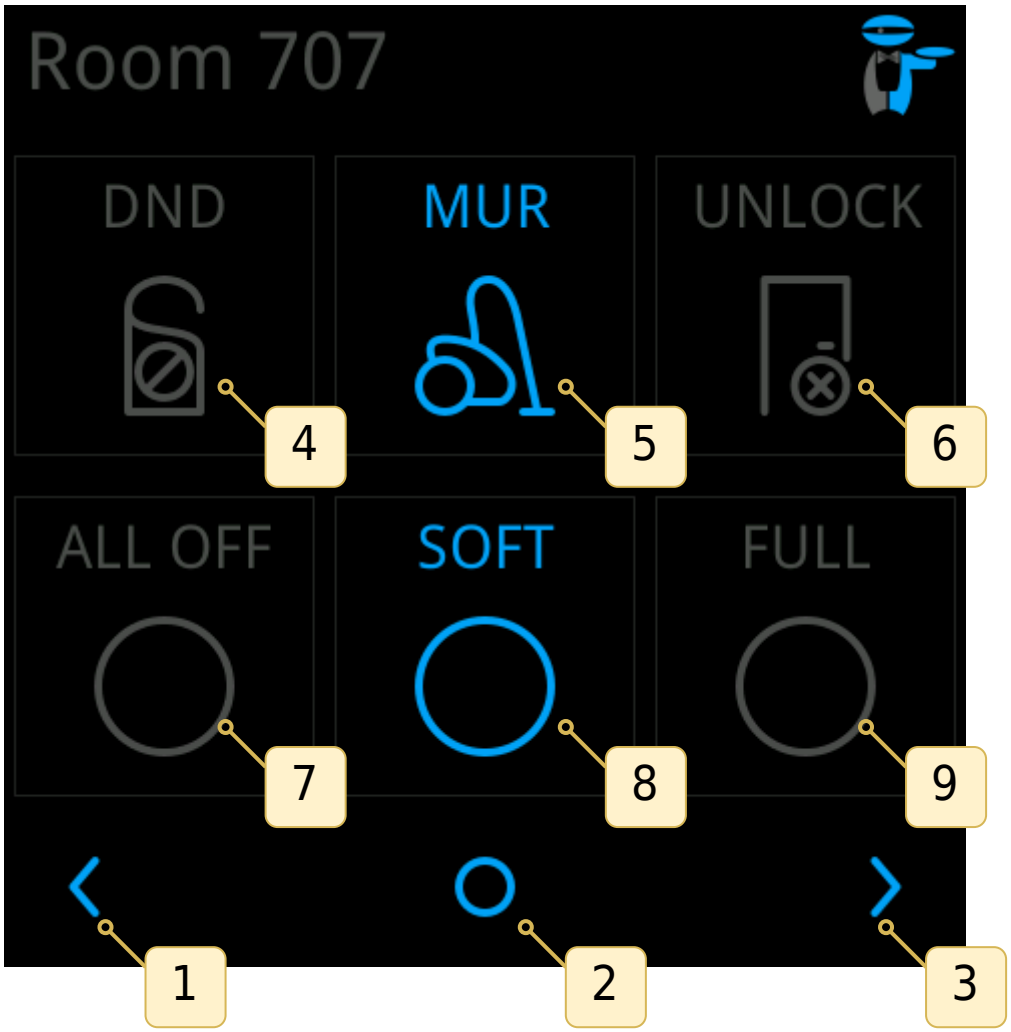


1	Previous screen
2	Idle screen
3	Next screen
4	Toggle DND (Do Not Disturb)
5	Toggle MUR (Make Up Room)
6	Unlock door
7	Scene “All off”
8	Scene “Soft”
9	Scene “Full”

1.2.3. HVAC screen

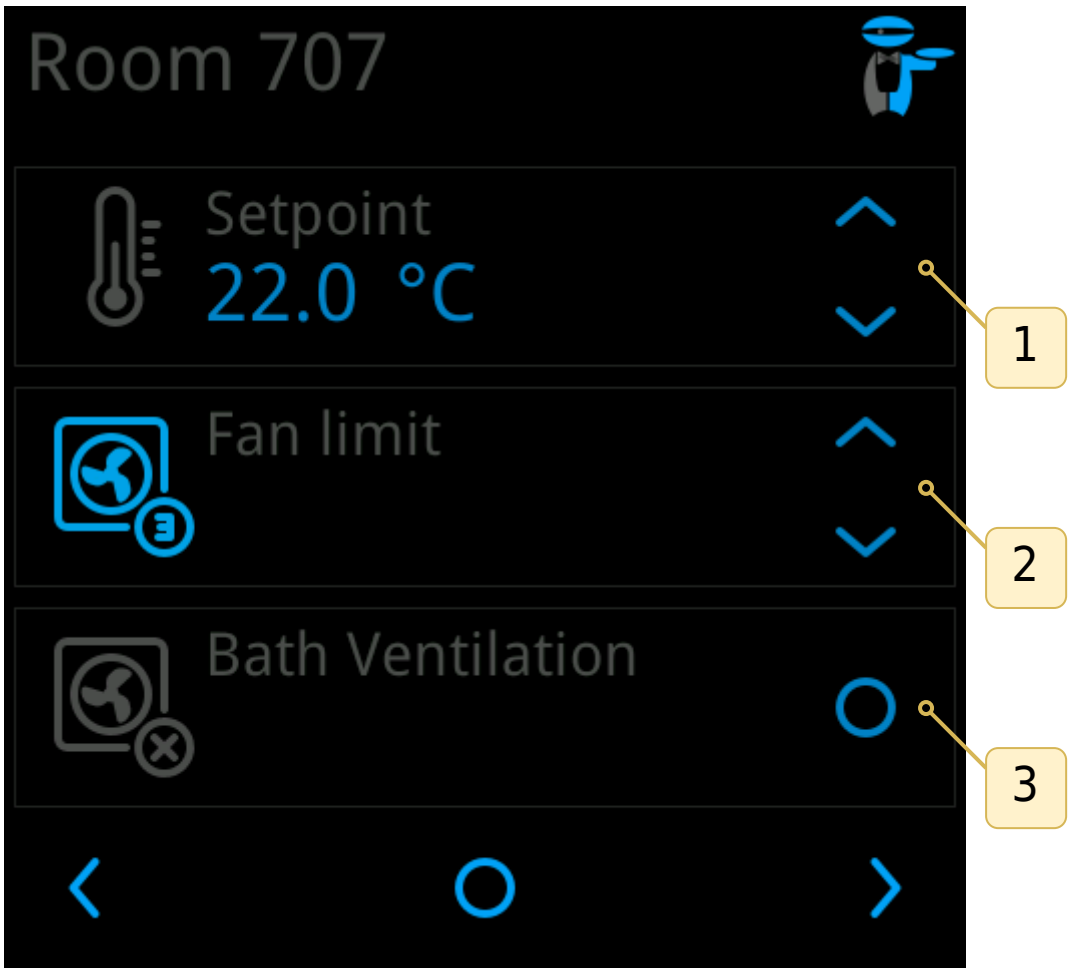


1	HVAC Set-point temperature increment / decrement
2	HVAC Fan limit increment / decrement
3	Toggle Bath ventilation

1.2.4. Lights screen

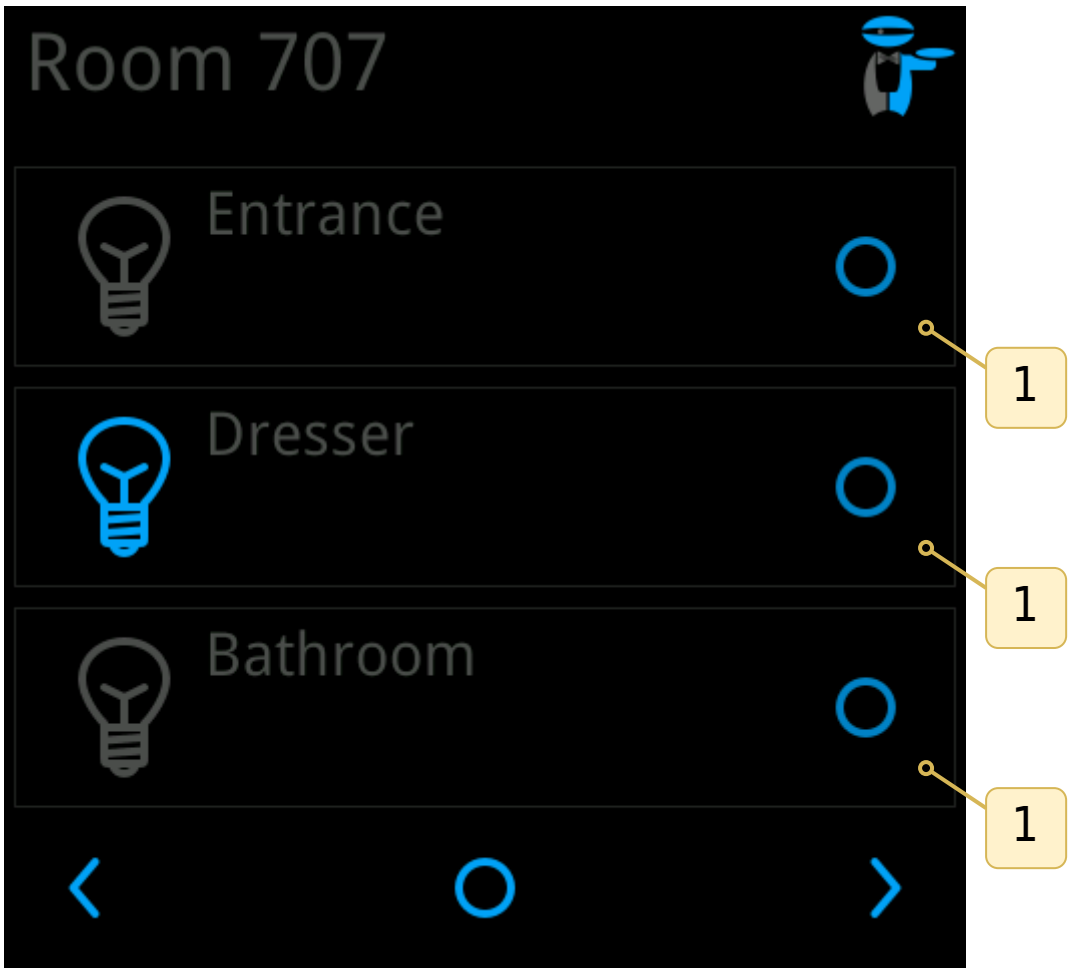

1	Toggle light ON / OFF


1.2.5. Dimmers & Blinds screen

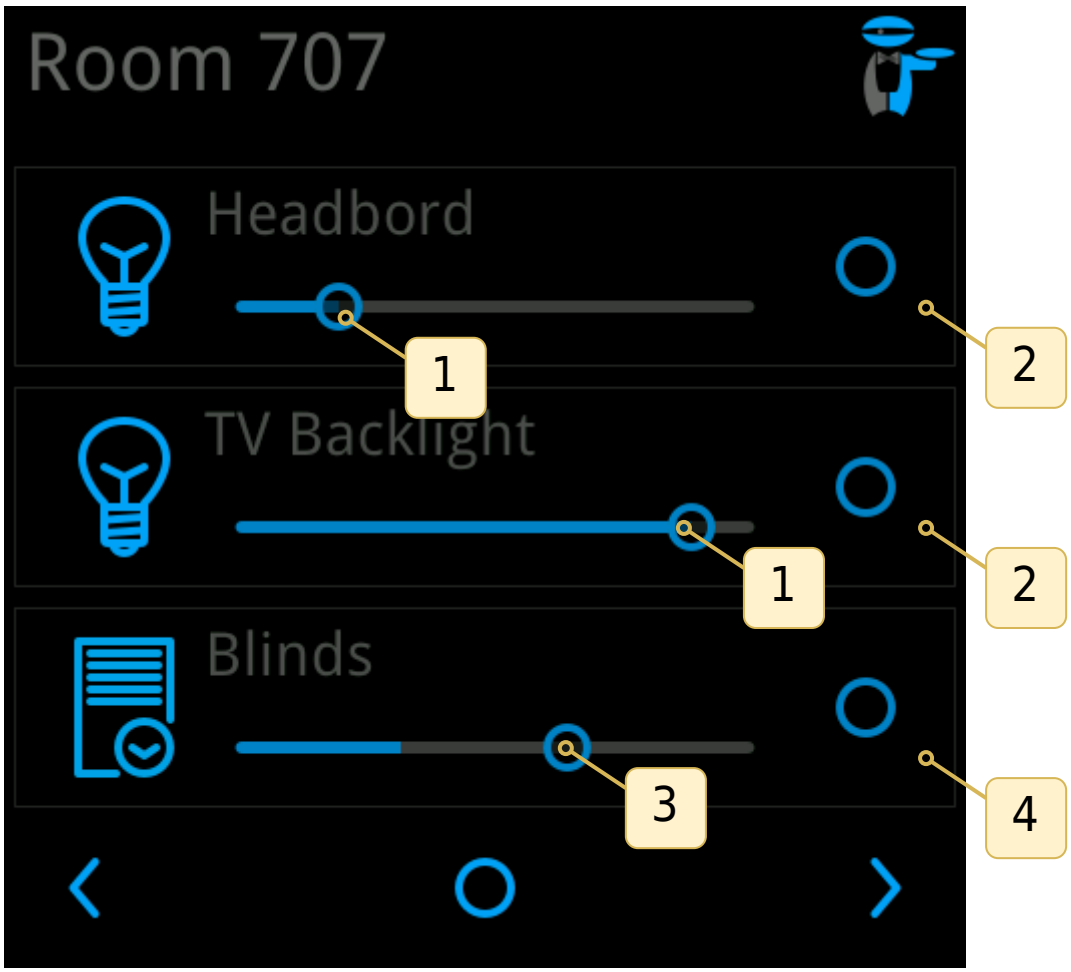

1	Slide to set lightness
2	Toggle light ON / OFF
3	Slide to set blinds setpoint (left = closed)
4	Stop blinds


1.2.6. Wake-up screens

1.2.6.1. Setup

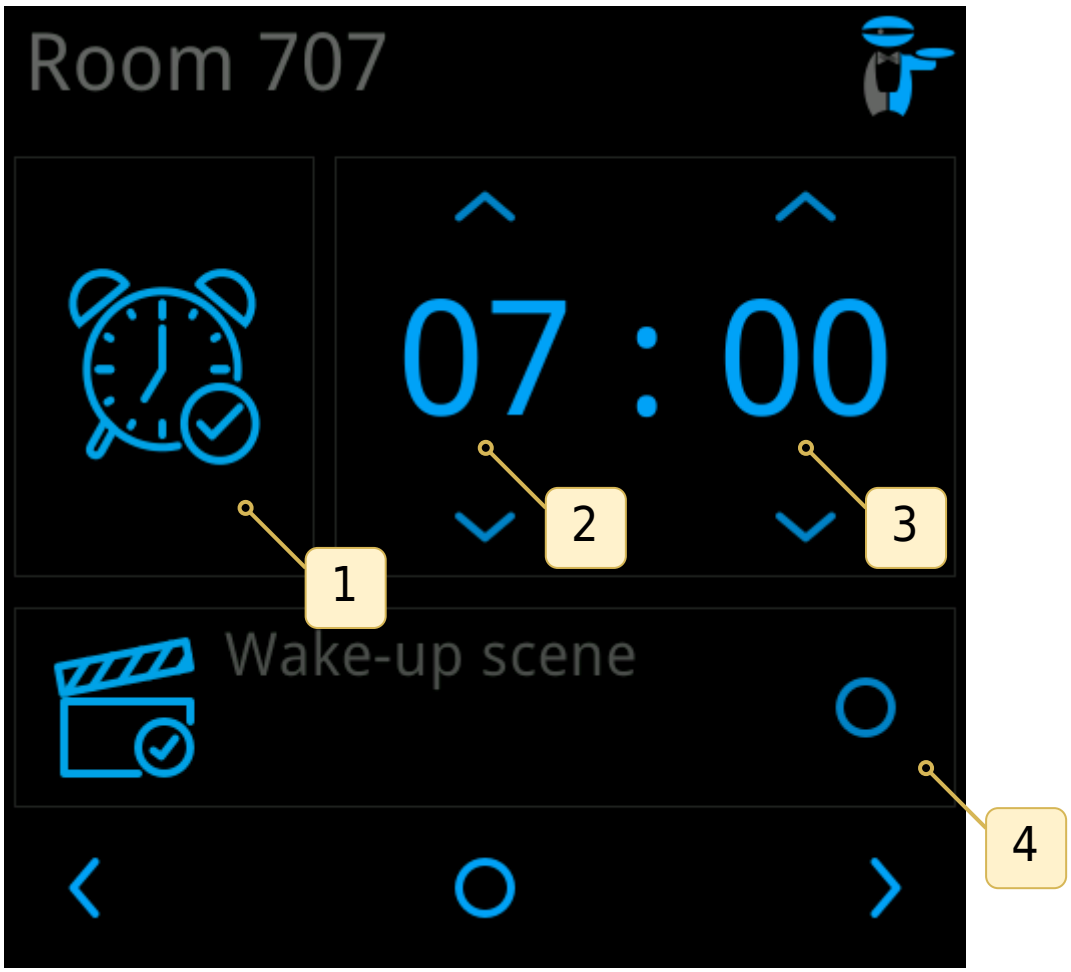

1	Toggle wake-up alarm ON / OFF
2	Set wake-up time
3	Set wake-up
4	Toggle wake-up scene

1.2.6.2. Alarm

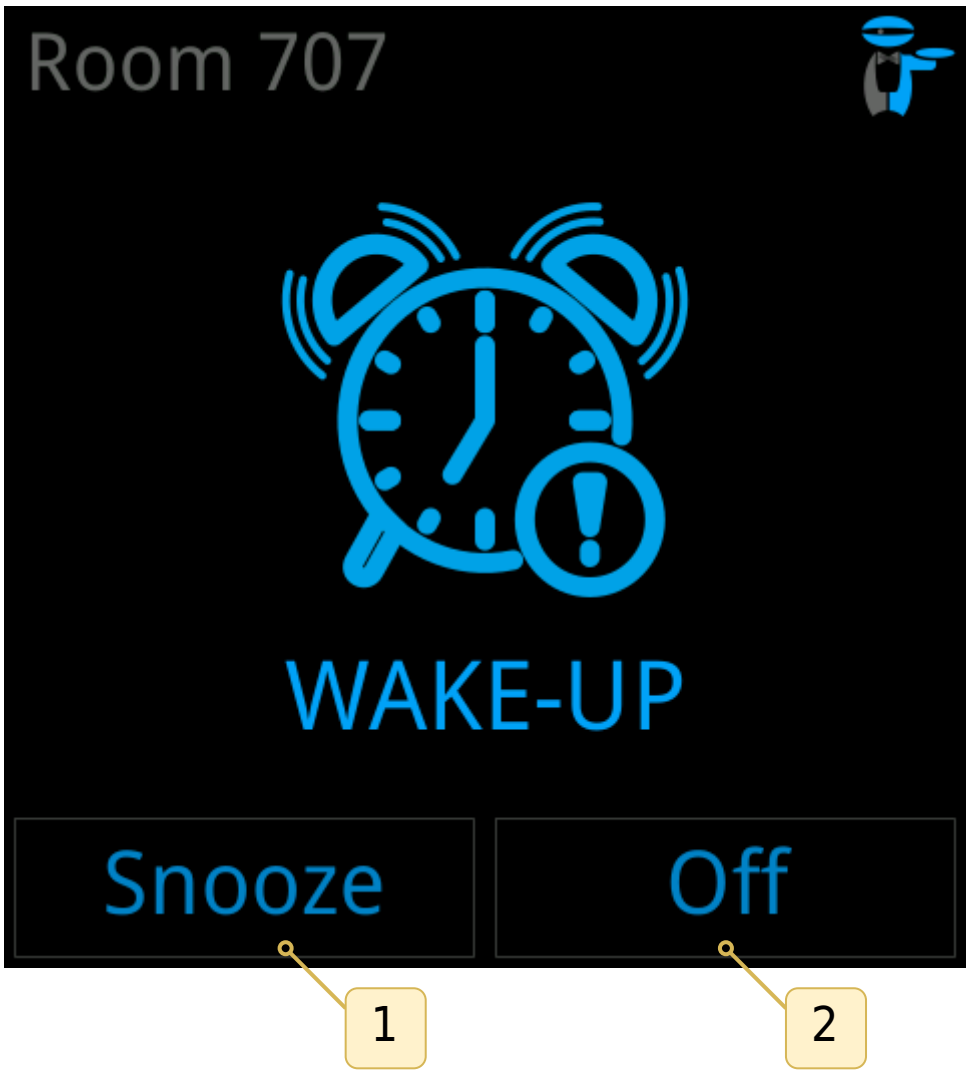


1	Snooze wake-up alarm
2	Turn off wake-up alarm

1.2.7. Door-bell screen

Door-bell screen is activated when door-bell button on corridor panel is pressed.

When the door-bell is activated, the beeper beeps briefly.

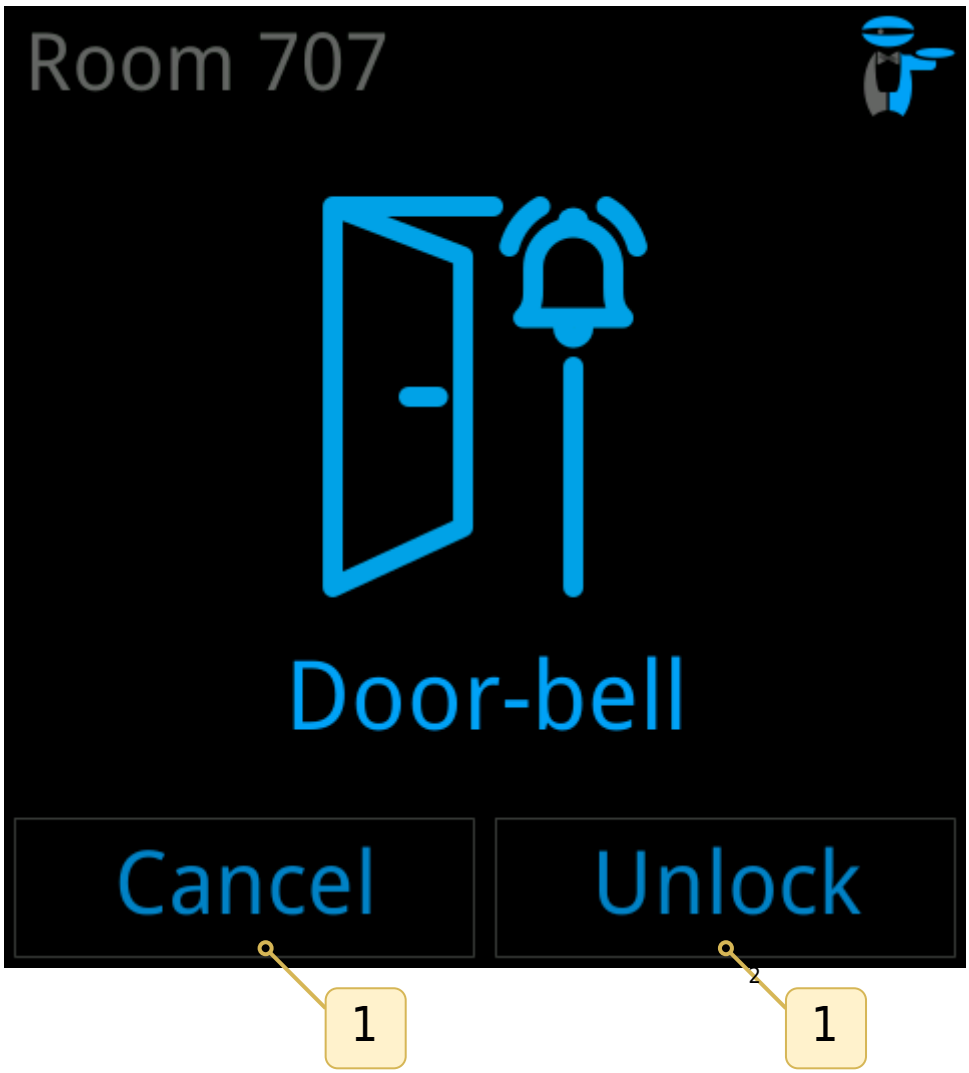


1	Close door-bell screen
2	Unlock door

1.2.8. SOS screen

SOS screen is activated when an SOS pull-switch is activated.

During SOS panel periodically beeps.

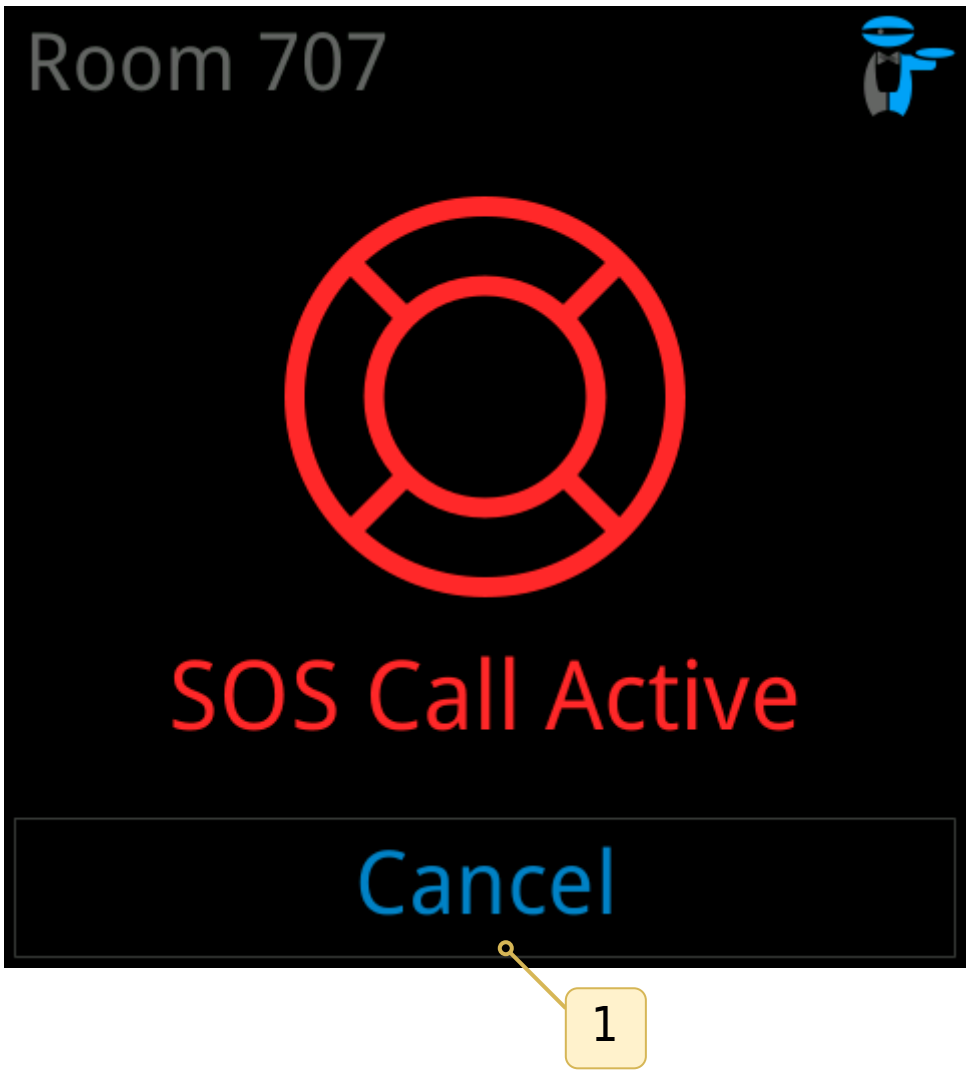

1	Dismiss off SOS alarm

1.2.9. Fire-alert screen

Fire alert screen is activated when temperature rise is abnormal. It can be activated also externally (from fire control center, reception, ...).

During Fire alert panel periodically beeps.



Fire alert cannot be dismissed from in-room panel.