


# Power plant connection

The power plants can be connected to the grid in two ways:

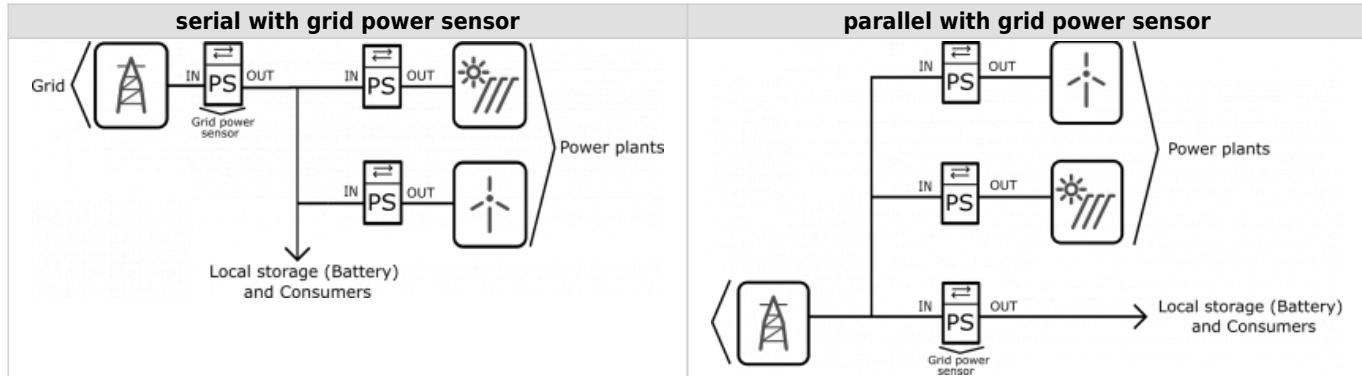

When configuring the power plant, select


- **in:** serial (**i**nternal) with grid power sensor
- **ex:** parallel (**e**xternal) with grid power sensor

Power plants are configured as internal by default.

Obtaining data (power, voltage, etc...) from power plants is possible in two ways:

1. adding **power sensor** to measure produced electricity
2. connecting PV inverter via Modbus TCP (for SolarEdge inverters only)

## EVSE and PV inverter connection

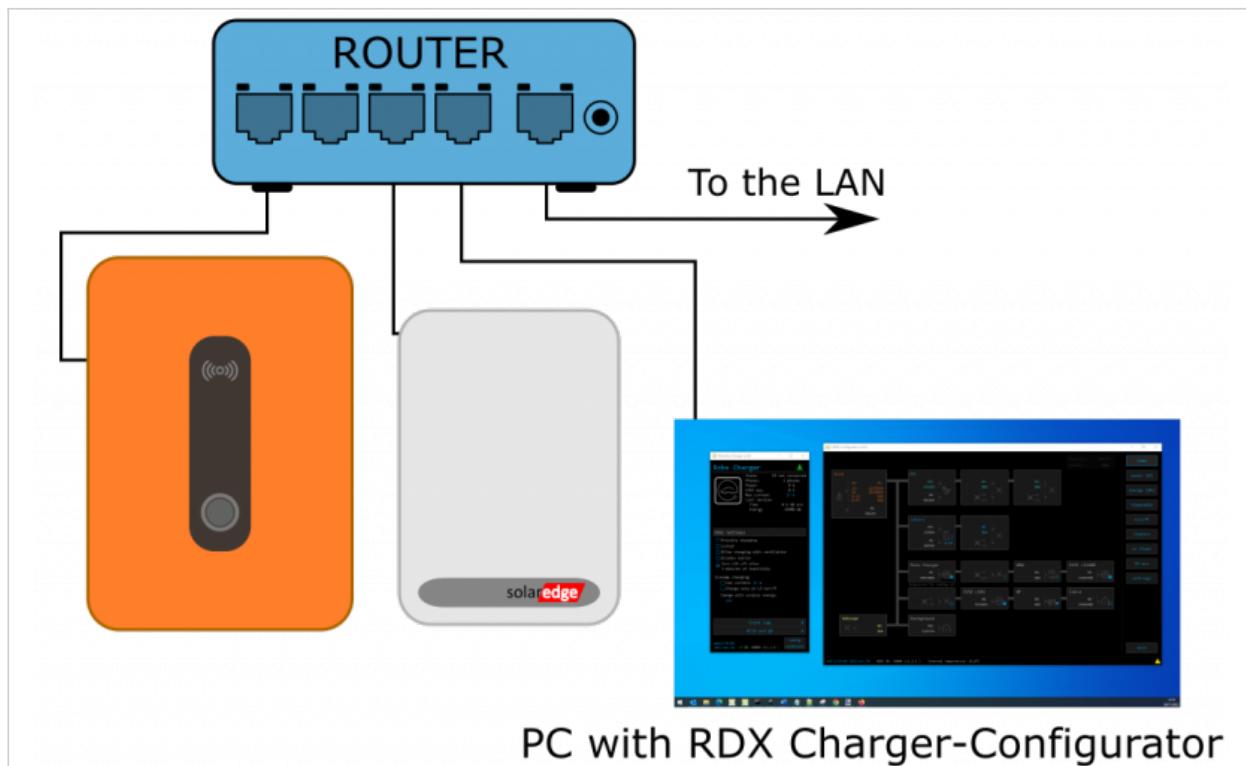

Add inverter using configurator:

- [settings](#) page → meter → select 'SolarEdge',

| SOURCES  | icon     | source management |     |  | meter      |
|----------|----------|-------------------|-----|--|------------|
|          |          | add               | del |  |            |
| Grid     | A        | ✓ OK              |     |  | PM3-I-D    |
| PV plant | PV plant | ✓ OK              |     |  | SolarEd in |
| /        | /        | X /               |     |  | /          |
| /        | /        | X /               |     |  | /          |

- [io mux](#) page → Slave device IP address → IP address → set IP address of inverter (inverter must have static IP)

| Slave device IP address |                 |    |
|-------------------------|-----------------|----|
| Device                  | IP address      | SN |
|                         | 0. 0. 0. 0      | ?  |
| PV plant                | 192.168. 88.207 | ?  |
|                         | 0. 0. 0. 0      | ?  |

Setup Modbus TCP on Inverter side using SolarEdge SetApp:

- Select Site Communication menu
  - RS485-1 → Protocol → SunSpec (Non-SE Logger)
  - RS485-1 → Device ID, enter address 1
  - Modbus TCP → Enable
  - set TCP port → 502

#### Note:

The TCP server idle time is 2 minutes. In order to leave the connection open, the request should be made within 2 minutes.

First, add inverter to Configurator, then setup Inverter by SetApp!